

# Opera 20 IP System Manual

Specifications are subject to change without notice.

Facilities described may or may not be supported by your network.  
Opera 20 IP and Operafone are the registered trademark of MDS Gateways.  
This documentation refers to:  
software version 20.044 or higher for the IP system phones and  
software version 12.265 or higher for the Opera 20 IP system.

DM 966 rev 7

---

# Contents

---

<b><u>1.</u></b>	<b><u>Introduction</u></b>	<b><u>5</u></b>
1.1.	Overview of the Opera 20 IP.....	5
1.2.	Status LEDs.....	6
1.3.	Back Panel Connectors, Fax port and power fail .....	6
1.4.	Features and Dialling Codes.....	7
<b><u>2.</u></b>	<b><u>System Mounting, Wiring and Connection on the LAN</u></b>	<b><u>9</u></b>
2.1.	Sequence required for installation .....	9
2.2.	Location.....	9
2.3.	Equipment .....	9
2.4.	Wall Mounting the Opera 20 IP.....	9
2.5.	System Wiring.....	10
2.6.	Three step Set-up flow chart.....	11
2.7.	Program the IP address of the system into the range of the LAN.....	13
<b><u>3.</u></b>	<b><u>Configure the system from the Browser</u></b>	<b><u>16</u></b>
3.1.	Browser based programming .....	16
3.2.	Enter Browser Based Programming.....	16
3.3.	System Programming Page.....	18
3.4.	Manual Programming of the SIP trunk lines .....	19
3.5.	Programming the External Lines .....	23
3.6.	Programming the Ringing Assignment.....	26
3.7.	Programming the Trunk Access digit.....	28
3.8.	Program other features using on-line Help.....	29
<b><u>4.</u></b>	<b><u>Get Internet Access</u></b>	<b><u>30</u></b>
4.1.	Universal Plug and Play available on site .....	30
4.2.	If the modem router is not at the default Gateway IP address.....	31
4.3.	If the modem router does not support Universal Plug and Play.....	32
<b><u>5.</u></b>	<b><u>Connect IP system phones</u></b>	<b><u>33</u></b>
5.1.	Connecting IP system phones .....	33
5.2.	Auto discovery of IP system phones on the LAN.....	34
5.3.	Connecting an IP system phone remotely across the public Internet .....	34
5.4.	Entering the system phone IP registration parameters manually .....	34
5.5.	User log-in to phone programming page .....	35
5.6.	Hotdesking .....	36
<b><u>6.</u></b>	<b><u>Software licences for additional functionality</u></b>	<b><u>37</u></b>
6.1.	Installing software licences.....	38
6.2.	Licence activation.....	40

Appendix I Power over Ethernet and Ethernet cable specifications .....	42
Standard Ethernet Cable .....	42
Appendix II System Tones .....	42
Appendix III Compatibility with third party headsets and analogue phones .....	43
Appendix IV Miscellaneous timer settings .....	44
Appendix V Environmental Specifications.....	45
Appendix VI User settings, trunk accesses, ringing assignments and CLIs .....	46
Appendix VII Common Address Book Table .....	52
Appendix VIII IP Addresses and RAS Tables .....	53
Appendix IX Call Logging outputs and formats.....	55
Diagnostic Logging.....	60
Appendix X Example: how to configure port forwarding on the Netopia modem router Cayman 3346.....	62
Appendix XI Usage of the twenty four available communication end points .....	77

# 1. Introduction

## 1.1. Overview of the Opera 20 IP

The Opera 20 IP is a next generation IP voice switch for SOHO and small business applications. The full IP internal architecture of the system allows seamless connection to VoIP networks using IP system phones and traditional analogue phones. The Opera 20 IP, depending on its configuration may also connect to either the legacy ISDN or PSTN public networks making it the ideal migration platform to the next generation network for the home-based business or small business. It connects four analogue telephones and up to 16 IP system phones to the public VoIP or PSTN networks.

Users make or receive calls via a SIP server in the public network, or via the PSTN/ISDN network using a simple analogue phone or an Operafone IP Executive phone or an Operafone IP Professional phone.

The Operafone IP Executive is an advanced multi function system phone with 16 programmable keys, 6 fixed keys, loudspeaker and a blue backlit 4-line display.

The Operafone IP Professional is an advanced multi function system phone with 6 fixed keys, loudspeaker and a blue backlit 4-line display.




Up to sixteen of these phones may be connected locally to the Opera 20 IP system or remotely over broadband Internet. Remote IP phones have full system functionality. The system phones have a two-port Ethernet hub, which allows a single cable to the desktop for both the phone and the PC.

The Opera 20 IP has a full range of pbx features including voicemail, automated attendant, least cost routing, speed dials, address books and call lists. Features such as advanced Multi-Layer Auto-Attendant, networking of multiple systems on different sites require the installation of a license. Licenses can also be installed to expand the number of users on the system, the number of trunks or the number of voicemail boxes or to network multiple systems.




## 1.2. Status LEDs

There are six LEDs behind the clear lens on the front of the unit. The functions of these are as follow, from left to right.

LED	Status: ON	Status: OFF	Status: Flashing
	System starting	Power off	Power On. Normal operation.
LAN	LAN link present	No LAN link present	LAN activity
	SIP server connection OK	SIP server connection NOT OK	One or more SIP accounts NOT OK
L1	ISDN BRA connected at L1	N/A	N/A
L2	ISDN BRA connected at L2	N/A	N/A
	Fault Condition. Contact technical support	No fault condition	N/A

## 1.3. Back Panel Connectors, Fax port and power fail

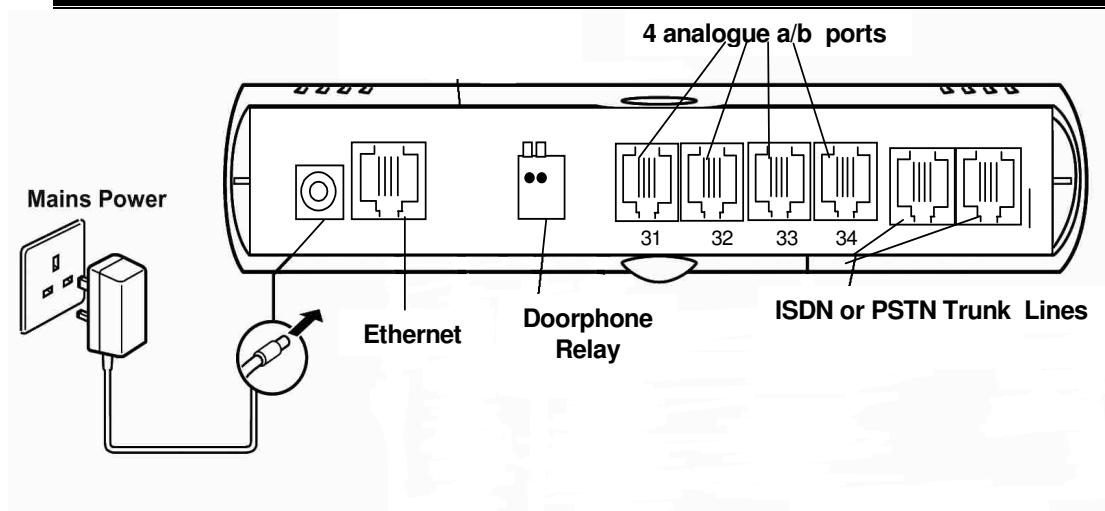

**Power Port:** For connecting the power adaptor.

**Ethernet Port:** For connecting the unit to a router or LAN.

**Doorphone Relay:** For connecting a doorphone relay

**Analogue Ports 31- 34:** for connecting analogue a/b extensions

**Fax Port:** A Fax machine should be connected to the designated fax port (default, analogue port 34) to which fax signals detected by the Automated Attendant, on the PSTN or ISDN trunks, are forwarded.

**Power fail:** On power failure, a PSTN line connected at L1 transfers straight through to port 34.

**L1 and L2:** For connecting the unit to ISDN or PSTN trunk lines from the public network.

## 1.4. Features and Dialling Codes

Feature	Code
Any trunk line	0
Any SIP trunk line	*00
Trunk lines 1 or 2	* 9 1 or * 9 2
SIP trunk lines 1 to 10	* 901 to * 910
Call User	User number (e.g. 11 – 34)
Groups 80 to 88	80 to 88
Operator Group	9
Auto-Attendant	700 -799
Forward all calls for user	* 2 1 * < destination > # destination examples: User number (11 – 34), Voicemail (*99), External number on any trunk (0 xxxxxxxxxxx) External number using a trunk (*91 xxxxxxxxxxx) Group (80 – 88), Operator Group (9), Common address book number (*4000 - *4199), Personal address number (*800 - *849), Auto-Attendant (700 -799) Networked user (network user number)
Cancel forwarding of all calls for user	# 2 1 #
Forward all calls for Group	If leader: * 2 1 * < group number > * < destination > # If not leader * 2 1 * < group number > * < destination > * < group PIN > #
Cancel forwarding of all calls for Group	If leader: # 21 * < group number > # If not leader: # 21 * < group number > * < group PIN > #
Restrict your outgoing CLI	* 30 #
Send your outgoing CLI	* 31 #
Common address book short codes	* 4 0 0 0 to * 4 1 9 9
Personal address book short codes	* 8 0 0 to * 8 4 9
Redial Last external number	* 5
Forward on No Answer for user	* 6 1 * < destination > #
Forward on No Answer for user with timer	* 6 1 * < destination > * <timer> #
Cancel Forward on No Answer for user	# 6 1 #
Forward on No Answer for group	If leader: * 6 1 * < group number > * < destination > * # If not leader * 6 1 * < group number > * < destination > * * < group PIN > #
Forward on No Answer for group with timer	If leader: *6 1 * < group number > * < destination > * < timer > # If not leader * 6 1 * < group number > * < destination > * < timer > * < group PIN > #
Cancel Forward on No Answer for group	If leader: # 61 * < group number > # If not leader: # 61 * < group number > * < group PIN > #
Camp On (Call Back on busy) internal	5
Do Not Disturb	* 6 2 #

Cancel Do Not Disturb	# 6 2 #
Opt out of a group	* 6 2 * <group number(80 – 88)> #
Opt into a group	# 6 2 * <group number(80 – 88)> #
Set Alarm Call	* 641 * HHMM #
Clear Alarm Cal	# 641 #
Forward on Busy for user	* 6 7 * < destination > #
Cancel Forward on Busy for user	# 6 7 #
Forward on Busy for group	If leader: * 6 7 * <group number > * < destination > # If not leader * 6 7 * <group number > * < destination > * < group PIN > #
Cancel Forward on Busy for group	If leader: # 6 7 * < group number > # If not leader: # 6 7 * < group number > * < group PIN > #
Activate Roaming PIN	* 6 8 <Roaming Account> <Roaming PIN> #
Deactivate Roaming PIN	# 6 8 #
CallPickUp/CallPickOff	* 7 1 < user number >
Universal pickup	* 7 1 0
Call Transfer Explicit (at dial tone with two calls on hold)	* 7 2
Conference (at dial tone with two calls on hold)	* 7 3
Meet-me Conference bridge access	6900 - 6901
Park/Unpark a call	* 7 4
Retrieve a parked call from an internal user	* 7 5 < user number >
Answer a universal page	* 7 6 *
Answer a page from an extension that's not being paged	* 76 < user number that is being paged >
Directed page	* 7 7 < user number >
Universal page	* 7 7 *
Intercom (force handsfree answer to system phone user)	#77 < user number >
Door opening code	* 7 8
Intrude (at busy tone)	* 7 9
Access voicemail	* 9 9
Connect to a user's Mailbox	# 9 9 <user number>
Connect to a user's Mailbox (without hearing welcome message)	# 9 8 <user number>
Transfer call to Mailbox (While ringing the User)	# 9 9
Direct access to a user when answered by the Auto Attendant	* + user number
Direct access to a user voicemail when answered by the Auto Attendant	# + user number
Access voicemail settings (when pressed while listening to voicemail welcome message)	#
<b>Programming</b>	<b>Code</b>
Program an external number in your personal address book.	** < 8 0 0 to 8 1 9 > * < external number > #
Erase a number from your personal address book.	# < 8 0 0 to 8 1 9 > #
Implement Ringing mode (Modes 1 to 5)	* 0 7 * <Ringing Mode > #
Set user PIN	* 70 ** NEW PIN * NEW PIN #
Clear user PIN	* 70 * CURRENT PIN #
Change user PIN	* 70 * CURRENT PIN * NEW PIN * NEW PIN #
Enter System Programming	*** # # # #
Play system IP Address	** 0 1 #
Set system IP Address	** 0 1 * xxx * xxx * xxx * xxx #
Play system subnet mask	** 0 2 #
Set system subnet mask	** 0 2 * xxx * xxx * xxx * xxx #
Play Gateway Address	** 0 3 #
Set Gateway Address	** 0 3 * xxx * xxx * xxx * xxx #



## 2. System Mounting, Wiring and Connection on the LAN

### 2.1. Sequence required for installation

It is important to follow the sequence in this manual of first verifying the compatibility of the system IP address with the range of the LAN and then connecting the system on the LAN, then accessing the system browser for configuration, then getting Internet access and only then connecting the IP system phones to the LAN.

See also the 3-step set-p flow chart in this manual.

### 2.2. Location

The Opera 20 IP is designed for wall mounting. The air-cooling slots must not be covered.

#### Find a location that is:

- ◆ Easily accessible and within 2 meters of the nearest available power point
- ◆ Isolated from plumbing or electrical wiring
- ◆ Not exposed to extremes of temperature, humidity, dust, chemicals or direct sunlight
- ◆ Sufficiently spacious and well-lit to allow you to wire the system

### 2.3. Equipment

#### Equipment required for system installation:

- ◆ Two screws and rawl plugs suitable for the material to be drilled
- ◆ Drill and chuck-key
- ◆ Drill bit and flathead screwdriver
- ◆ CAT-5 cable to connect to the router or LAN.
- ◆ RJ 45 cables for the analogue users, relays and line connections

### 2.4. Wall Mounting the Opera 20 IP

1. Place the Opera 20 IP unit against the wall and mark the positions of the central fixing hole and the lower fixing hole.
2. Drill the holes, insert rawl plugs and insert screw into the wall at the location of the central fixing hole, but leave it protrude about 5mm.
3. Place the unit onto the central fixing screw.
4. Fix the unit horizontally by inserting the second screw in the fixing hole at the bottom of the unit.

**The system is now ready for wiring.**

---

---

## 2.5. System Wiring

---

---

### **Connecting the Ethernet Port.**

Connect the Ethernet LAN port of the Opera 20 IP to the LAN connection point using a CAT-5 Ethernet cable. The Ethernet port is compatible with any 10/100BaseT Ethernet switch.

### **Analogue Users 1 – 4**

Plug the analogue telephones directly into the RJ45 analogue user ports at the back of the **Opera 20 IP**. The maximum analogue user line length is 1,000 metres.

### **Connecting the ISDN/PSTN lines**

Connect the L1 and L2 line ports of the Opera 20 IP to the ISDN or PSTN termination points using RJ45 line cables.

### **Connecting the relay**

Connect the relay port of the Opera 20 IP to the door phone using RJ45 an cable, if required.

### **Powering Up**

Connect the AC mains power cable from the back of the unit to the AC power supply using the plug-top adaptor power-supply provided.

## 2.6. Three step Set-up flow chart

### STEP 1. Power the Opera system up

The LEDs flash during the initiation sequence and finally just the power LED flashes.

#### What you need to know before you start:

1. The IP address range of the LAN.
2. The IP address of the Router on the LAN.
3. Does your Router Support UPnP and is it enabled?

The system has a default IP address of 192.168.1.250 and mask of 255.255.255.0  
Is this ok for you?

No

### Change the IP address of the system

To hear the systems current IP address or Subnet mask.

1. Plug an analogue phone into one of the analogue ports
2. Dial **\*\*01#** for the IP address or **\*\*02#** for the Subnet mask. 3. The system will call out the current setting.

*To change the systems current IP address or Subnet mask.*

1. Dial **\*\*01\*DDD\*DDD\*DDD\*DDD#** for the IP address or **\*\*02\*DDD\*DDD\*DDD\*DDD#** for the Subnet mask, where DDD represents the elements of the IP address or subnet mask, i.e. dial **\*\*01\*192\*168\*0\*100#** to set the IP address to 192.168.0.100 or **\*\*02\*255\*255\*255\*254#** to set the subnet mask to 255.255.255.254

Yes

The system has default Gateway IP address **192.168.1.254**.  
Is this ok for you?

No

### Change the Gateway IP address of the system

Plug the system into the LAN, Point a PC browser at the systems IP address. (default <http://192.168.1.250>)


User name: admin

Password: 1000

Click on the link **IP Addresses** in the **IP Settings** panel.

Enter your gateway IP address in the **Default Gateway** field, and click save.

Yes

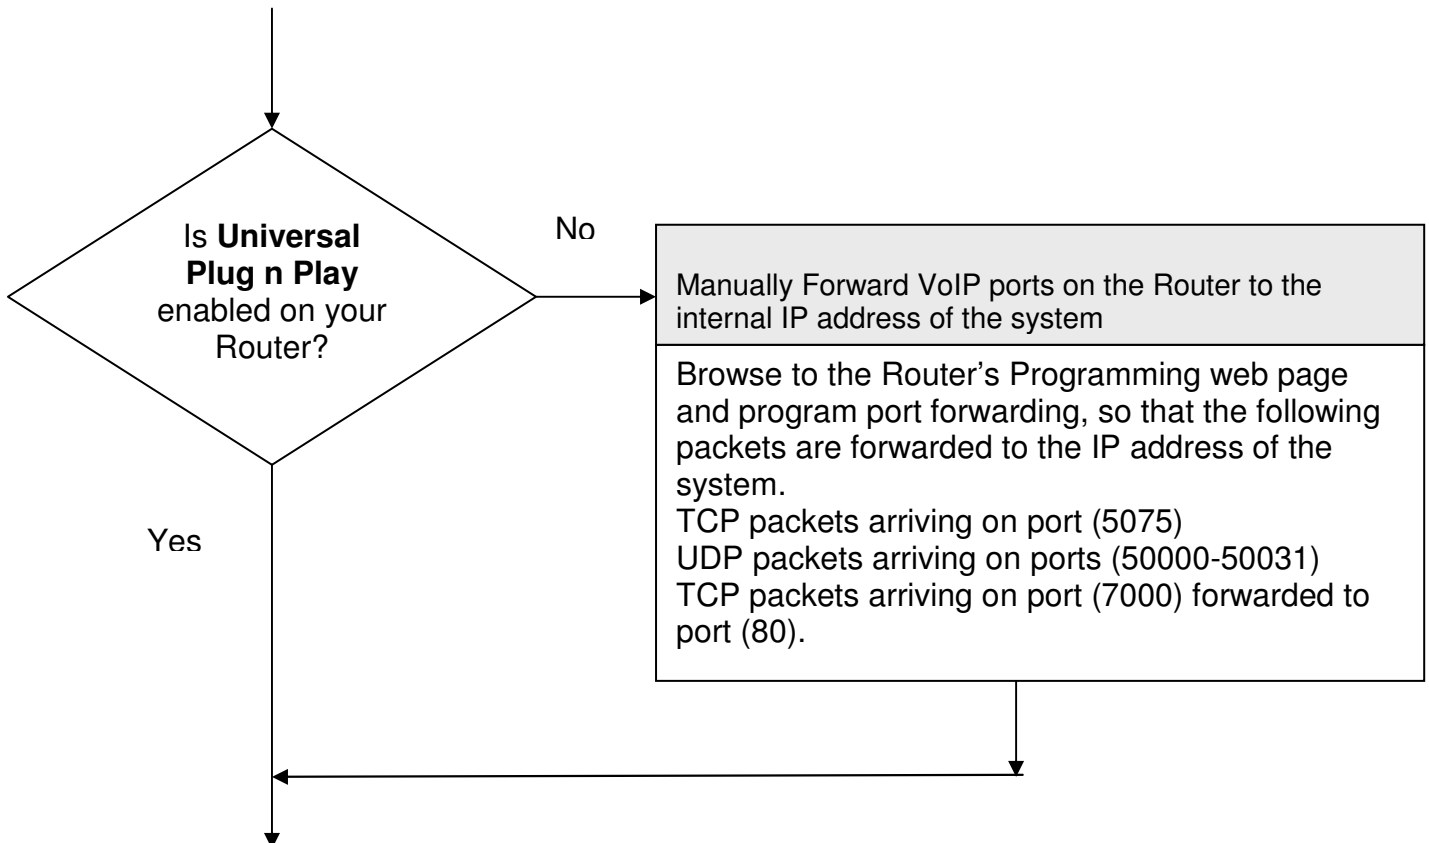

### STEP 2. Connect the IP system phones to the LAN

The IP system phones request an IP address from the DHCP server in the router. (**Note:** If DHCP is not enabled in the router, you need to manually set the local IP address in each Phone; see phone installation guide for this).

The phone then **Auto-discovers** the advantage system and is assigned an IP registration name and an IP registration PIN along with the WAN (public) IP address of the router.

***That's it. Your IP system phone should now be connected to the Opera system and be able to make and receive calls***

### STEP 3. If you wish to use your IP system phone at a remote location

Just take the IP system phone home and connect it to you home LAN. The IP system phone will request an IP address from the DHCP server in your router. (**Note:** If DHCP is not enabled in the router, you will need to manually set the local IP address in the Phone: depress Menu key for 10 seconds, then scroll to Local IP Params/Change IP Address.) Once it has a Local IP address, the phone will then connect back to the system over the Internet.

## 2.7. Program the IP address of the system into the range of the LAN

The default IP address of the Opera 20 IP is 192.168.1.250.

The IP address of the system must be in the range of the LAN to which it's connected. The system does not have either a DHCP client nor a DHCP server, to minimise potential for conflicts.

If for example the LAN range is VVV.XXX.YYY.ZZZ, the first three elements of the IP address of the system must be altered to VVV.XXX.YYY and the last element must be taken from the range 1-255, but excluding those numbers at which devices are already connected.

The IP address of the Opera20 IP can be changed in a number of ways.

### 2.5.1. Change the IP address of the system using an analogue phone

Connect an analogue phone to one of the analogue ports of the Opera 20 IP.



At internal dial tone, dial \*\*01# and the Opera 20 IP system will announce its internal IP address.

#### Enter new IP Address into the Opera 20 IP:

Internal Dial Tone	*	*	0	1	*	D	D	D	*	D	D	D	*	D	D
	D	*	D	D	D	#	☺	System will set new IP Address							

where each 'DDD' represents one element of the IP address.

Dial '\*\*01\*192\*168\*000\*001#' to assign the system the IP address 192.168.0.1.



Smiley face indicates successful programming tone. You will get this tone after you have successfully programmed an option. At this tone, you should clear down.

#### Enter Subnet Mask:

Internal Dial Tone	*	*	0	2	*	D	D	D	*	D	D	D	*	D
--------------------	---	---	---	---	---	---	---	---	---	---	---	---	---	---

D	D	*	D	D	D	#	☺	System will set Subnet Mask
---	---	---	---	---	---	---	---	-----------------------------

where each 'DDD' represents one element of the subnet mask.  
Dial '\*\*02\*255\*255\*255\*254#' to assign the mask 255.255.255.254.

### Check Local IP Address:

Internal Dial Tone	*	*	0	1	#	System will read out Local IP Address
-----------------------	---	---	---	---	---	--

### Check Subnet Mask:

Internal Dial Tone	*	*	0	2	#	System will read out Subnet Mask
-----------------------	---	---	---	---	---	----------------------------------

### 2.5.2. Change the IP address of the system using a PC

Connect a PC directly to the LAN port of the system using an Ethernet cable.



- Configure the IP address of the PC in the same address range as the Opera 20 IP system, default address 192.168.1.250. The first three elements of the IP address of the PC must be 192.168.1 and the last element must be taken from the range 1-255, but excluding 250.
- Open a browser on the PC and point it at the the Opera 20 IP system default address 192.168.1.250.
- Login to the system with the username 'admin' and the password '1000'.
- Click on the link 'IP Adresses' in the section 'IP settings', change the IP address of the system and press 'Save'.

## IP Connection Testing

To check that the IP configuration is correct and both the PC and the Opera 20 IP are on the same network -

At the PC, from Windows -

- Go to <**Start**>
- Select <**Run**>

A window prompting the user to open a program will appear -

- Type "**command**" (or "**cmd**" in some cases for Windows 2000) in the white field. The MS-DOS window opens with the following prompt - **C:\\_**
- Type "**ipconfig**" at the cursor.

The details of the IP configuration of the PC will appear on the window - e.g.

Windows IP Configuration -

```
IP Address ..... 192.168.1.251
Subnet Mask ..... 255.255.255.0
Default Gateway ..... 192.168.1.254
```

Make sure that the configuration that appears on your PC is correct.

In order to test the IP connection between the PC and the Opera 20 IP, type "**ping**", followed by the IP address of the Opera 20 IP. To test for the example shown above, type -

### **Ping 192.168.1.250**

The PC will ping the system with 32 bytes of data and report the results. If the IP connection is correct, the results should state -

**Packets: Sent=4, Received=4, Lost=0 (0% Lost).**

If the IP connection is incorrect, check again that the system and the PC are in the same IP address range and that the cabling connections are correct.

### **Safety Notes**

- **This unit should only to be opened by service personnel.**
- **There are no serviceable parts inside the housing**

## 3. Configure the system from the Browser

### 3.1. Browser based programming


This section describes how to connect to the Browser interface on the Opera 20 IP and enter the basic configuration information needed for the operation of the system. Once you have successfully connected to the browser, the full range of features offered by the system can be programmed. The browser interface also allows a software upgrade either locally by uploading it from a PC or remotely by requesting it from a remote management server.

There is a **Help** Button on each feature-programming page. On clicking the Help button, the Help page appears on screen giving an explanation of the feature and indicating how to program the feature.

Programming is carried out from a PC using any standard Internet Browser, e.g. Netscape Navigator or Microsoft Internet Explorer, that is connected to the system either directly on the Ethernet Port or through a Local Area Network (LAN).

### 3.2. Enter Browser Based Programming

To use Browser Based Programming, the system and the PC must be on the same network with an IP connection established between them as described above.

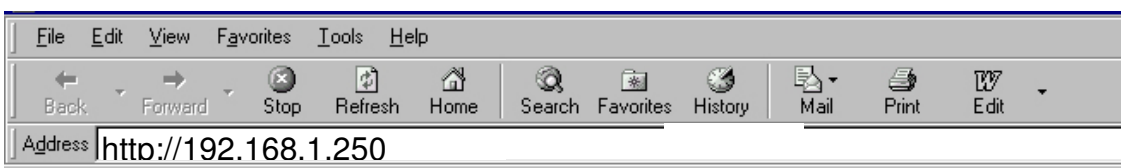

Open the Internet Browser and type the IP address of the system.  
The default address is - `http://192.168.1.250`

The IP address of the system can be checked as described in section 2 above.

Once the IP connection is established, the following login page will be displayed:



Login

Username

Password

Login

Enter:

Username: admin

Password: 1000

The main configuration page will now be displayed.

## 3.3. System Programming Page

Following login, the main configuration screen, similar to that shown below, will be displayed. This shows a list of all of the programmable settings for the system divided into related groups for ease of programming.

Clicking on any one of these links will open the configuration page for that parameter.

The screenshot displays the main configuration page of the Opera 20 IP System. At the top, there are links for 'Logout', 'Forum 3000 Installation', 'Revision: 11.128', and 'Help'. The main content area is organized into several columns of settings, each with a dropdown menu for the category name. The categories and their respective settings are as follows:

- System Settings**
  - Unattended Transfer
  - Trunk to Trunk Transfer
  - Pickup Restriction
  - Common Address Book
  - Music on Hold
  - Music On Transfer
  - Ringing Cadences
  - System Properties
  - Administrator Password
  - Installer Password
  - Browser Language
  - System Maintenance
  - System Licenses
  - Remote Maintenance
  - Roaming Pin
  - Dial Tone Detection
  - Least Cost Routing
  - Logging Options
  - [Fewer Links](#)
- User Settings**
  - User Numbering
  - User Names
  - User Programming
  - Call Waiting
  - Intrude
  - Call Pick-Up/Pick-Off
  - Do Not Disturb
  - Call Forwarding
  - Conferencing
  - Internal Paging
  - Direct Trunk Seizure
  - Bar User Programming
  - Voice Mail
  - Operator Functionality
  - Fallback to Operator
  - Outgoing CLI
  - Call Back
  - Called Party
  - Lists Of Calls
  - Pin Codes
  - Roaming Pin Extns
  - Hotline Users
  - IP Phone Registration
  - IP Phone Address
  - Alarm Calls
  - Fax Extensions
  - Relative Levels
  - [Fewer Links](#)
- Group Settings**
  - Group Numbers
  - Group Names
  - Group Assignment
  - Group Attributes
  - Fallback to Operator
- External Numbers**
  - Names for External Numbers
  - Ringing Assignment
  - Ringing Cadences
- SIP Trunks**
  - SIP Accounts
- PSTN Analogue Trunks**
  - Analogue Ringing Assignment
  - Analogue Trunk Present
- Trunk Settings**
  - Trunk Access Codes
  - Trunk Access Priority
  - PBX Lines
- Access Control**
  - Trunk Access
  - Level of Access
  - Emergency Numbers
  - Local Numbers
  - Local 'Plus' Numbers
  - National Numbers
  - National 'Plus' Numbers
  - International Numbers
  - Barred Numbers
  - [Fewer Links](#)
- IP Settings**
  - IP Addresses
  - Port Numbers
  - DiffServ
  - RAS IP Addresses
  - Gateway Configuration
  - Voip Networking

At the bottom of the page, there is a link for 'User manuals'.

## 3.4. Manual Programming of the SIP trunk lines

The VoIP trunk lines of the Opera 20 IP may be configured automatically by the network operator. However, should you need to programme the trunks manually, you can do so by clicking the link 'SIP Accounts' under the heading SIP Trunks. The following page will be displayed:

Index	Name	Username	Provider	Trunk Access	Status	
1	line 1	027956439	sip.operator.com	*901	Disabled	<a href="#">Edit</a>
2				*902	Disabled	<a href="#">Edit</a>
3				*903	Disabled	<a href="#">Edit</a>
4				*904	Disabled	<a href="#">Edit</a>
5				*905	Disabled	<a href="#">Edit</a>
6				*906	Off-Line	<a href="#">Edit</a>
7				*907	Off-Line	<a href="#">Edit</a>
8				*908	Off-Line	<a href="#">Edit</a>
9				*909	Off-Line	<a href="#">Edit</a>
10				*900	Off-Line	<a href="#">Edit</a>

Back

This page is used to display the status and parameters of the SIP external lines, which connect to the Voice over IP public network. Each telephone number corresponds to an account on the public VoIP network. Each account has a user name and password. These details are provided by the operator of the network.

The parameters of the SIP accounts are displayed here. Press the 'edit' button to configure. The following parameters are displayed.

**NAME:** The Opera 20 IP may allocate a name to each SIP account.

**USERNAME:** This is the username defined by the network operator for this SIP account.

**PROVIDER:** This is location of the SIP server as defined by the network operator. Typically it is in the format sip.operator.com.

**TRUNK ACCESS:** This is the line access code for this trunk. The user on an outgoing call may select this particular trunk by dialling the line access code prior to dialling the external number.

**STATUS:** Indicates whether the SIP account is operational or not.

Click on the 'Edit' button on the first line of this table. The following page will be displayed:

Home	SIP Account - #1		Help
<b>Basic Settings</b>			
Name	<input type="text" value="line 1"/>	Enabled	<input type="button" value="No"/>
Trunk Access	<input type="text" value="*901"/>	Status	<input type="text" value="Disabled"/>
<b>Provider Settings</b>			
Sip Server	<input type="text" value="sip.operator.com"/>	Forced Proxy IP	<input type="text" value="81.240.251.22"/>
Sip Server Port	<input type="text" value="5060"/>	RegInterval	<input type="text" value="1800"/>
Registration Required	<input type="button" value="Yes"/>	STUN Server	<input type="text"/>
<b>Subscriber Settings</b>			
Username	<input type="text" value="027956439"/>	AuthID	<input type="text" value="u27956439"/>
Password	<input type="text" value="*****"/>	External Number	<input type="text" value="027956439"/>
<b>Audio Settings</b>			
Codec Priority 1	<input type="button" value="G729"/>	Codec Priority 2	<input type="button" value="G711-A"/>
Codec Priority 3	<input type="button" value="None"/>	DTMF Method	<input type="button" value="RTP Event"/>
<b>Dialling Settings</b>			
Dial Plan	<input type="text"/>		
Dial Timeout	<input type="text" value="4"/>		
<input type="button" value="Save"/>		<input type="button" value="Back"/>	

This page is used to configure the SIP external lines that connect to the Voice over IP Operator network. Each SIP trunk requires an account on the Operator network. The network operator provides the details of this account.

The parameters of the SIP trunk are altered or edited on this page. The following parameters may be configured:

### Basic Settings

**NAME:** The Opera 20 IP system can allocate a name to each SIP trunk line.

**TRUNK ACCESS:** This is the line access code for the trunk. The user, on an outgoing call, may select a particular trunk by dialling the trunk access code prior to dialling the external number.

**ENABLED:** The line may be enabled or disabled here.

**STATUS:** Indicates whether the SIP trunk is operational or not.

### Provider Settings

**SIP SERVER:** The location of the SIP server in the Operator's network. The Operator provides this information. Typically it will be in the format sip.operator.com.

**SIP SERVER PORT:** This is the PORT number for the SIP protocol. By default it is 5060. If the operator uses a different port number it should be entered here.

**REGISTRATION REQUIRED:** Is registration required by the network operator or not?

**FORCED PROXY IP:** The actual SIP server IP address must be entered here if it's different from the IP address associated with the SIP server URL. The SIP operator may insist that all SIP messages are relayed to the forced proxy IP address entered here; the SIP server URL is included in the SIP messages from the system.

**REGINTERVAL:** The SIP protocol allows for periodic registration messages to be sent to the SIP server in order to keep it updated on the status of the SIP client. The parameter RegInterval allows the system administrator to program the length of the registration interval in seconds.

**STUN SERVER:** Some operators require the use of a STUN server (Simple Traversal of UDP through NATS). If the operator provides the address of a STUN server with the account details, it should be entered here.

### Subscriber Settings

**USERNAME:** This is the username provided by the network operator for the SIP account.

**PASSWORD:** This is the password provided by the network operator for the SIP account.

**AuthID:** Authorisation ID, if required, is provided by the network operator.

**EXTERNAL NUMBER:** This is the public telephone number associated with this SIP account. It is provided by the network operator and should be entered here. It is then added automatically to the list of external telephone numbers of the system.

### Audio Settings

**Codec priority 1,2,3:** These fields are used to set the preferred audio codecs.

**DTMF Method:** This parameter allows the system administrator to select the method of transmitting DTMF digits across the VoIP network.

### Dialling Settings

**DIAL PLAN:** During dialling on outgoing calls, the digits are stored until the complete number has been dialled and then the complete number is transmitted en bloc to the VoIP network. A period of three seconds without dialling is interpreted by the system as the end of dialling. This means that the system must delay transmitting the number for a period of 3 seconds after the end of the last digit. The Dial Plan allows the system administrator to define number types that can be dialled immediately without waiting for the 3-second period to elapse.

For example, the entry

[2-8]XXXXXX=,08[567]XXXXXX=,999=,911=

will be interpreted by the system as follows:

Any number with first digit 2,3,4,5,6,7 or 8 followed by six digits may be dialled immediately and

Any number beginning with 08 and whose third digit is 5,6 or 7 followed by seven digits may be dialled immediately and

The number 999 may be dialled immediately and

The number 911 may be dialled immediately.

**DIAL TIMEOUT:** This is a pre-defined period without dialling which is interpreted as the end of dialling. The default is 3 seconds and this may be changed here by specifying an alternative value.

Click [SAVE] to accept new settings.

The double arrows << and >> at the bottom of the page may be used to jump forward or back to the next SIP account.

Click [BACK] to return to the SIP Accounts menu.

---

## 3.5. Programming the External Lines

---

The Opera 20 IP may have up to two external line interfaces. These, if fitted, may be used to connect either ISDN To lines or analogue trunk lines.

You may program these lines as ISDN or analogue on the page 'System Line Selection'

Trunk	ISDN	PSTN
L1	<input checked="" type="radio"/>	<input type="radio"/>
L2	<input type="radio"/>	<input type="radio"/>

When ISDN T0 lines are connected, you must program the ISDN telephone numbers associated with each T0 interface into the Opera system. These numbers are entered on the 'External Number List' as shown below.

External Number List Help

Index	External Number
1	8160085
2	8160083
3	8160095
4	8160086
5	8160091
6	
7	
8	
9	
10	

1 2 3 4 5 6 7 8 9 SIP

Save Back

When the external numbers have been entered in the white boxes, press 'Save' and 'Back'.



These ISDN external numbers must be associated with one or both of the T0 line interfaces that may be on the system. This is required for outgoing ISDN calls to present a CLI that is recognised as a valid number for the Trunk interface by the ISDN network. This is done on the 'External No. Trunk assignment' page under 'ISDN Trunks' as shown below.

Index	External Number	T1	T2
1	8160091	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
2	8160095	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
3	8160086	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
4	8160083	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
5	8160085	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
6	8160096	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
7	8160081	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
8	8160094	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
9		<input type="checkbox"/>	<input type="checkbox"/>
10		<input type="checkbox"/>	<input type="checkbox"/>

1 2 3 4 5 6 7 8 9

Save Back

For each external number, tick the ISDN T interface associated with this number and press 'Save'.

## 3.6. Programming the Ringing Assignment

Each external telephone number connected to the Opera 20 IP may be programmed to ring a different user or set of users on incoming calls. The SIP trunk assignment is done on the 'Ringing assignment' page in the section 'External Numbers'. The ISDN ringing assignment is done on the 'Ringing Assignment' page under 'External Numbers'. The analogue line assignment is done on the 'Analogue Ringing Assignment' page under PSTN Analogue Trunks. The ringing assignment may be changed for different times of the day. By default, three ringing modes are defined, 'Day ringing' and 'Night ringing' and Operator Mode and there are two additional modes that can be defined by the user.

By default, all external lines are programmed to ring the first IP user, 11, of the Opera 20 IP. This user, in the default configuration, is defined as sole member of the operator group, group 9.

This ringing assignment can be changed by typing the users or groups or Auto-Attendant message to be called when an incoming call arrives on a particular line, as shown below and pressing the SAVE button.

You may proceed to program another ringing mode by clicking on the link below the table on the left.

### Ringling Assignment Table for SIP Trunks

Index	External Number	Day Ringing
1	027956439	9
2	027956440	9
3	027956441	9
4	027956442	9
5		9
6		9
7		9
8		9
9		9
10		9

Ringing Mode 1 2 5

Save Back

### Ringling Assignment Table for Analogue PSTN trunk lines

Home	Analogue Ringing Assignment	Help
Analogue Trunks	Day Ringing	
7	<input type="text"/>	
Ringing Mode 1 2 5		
Save		Back

## 3.7. Programming the Trunk Access digit

The trunk line access digit is the digit dialled by a user to make a call on an external trunk. In addition to the default trunk line access code there are eight other codes that may be allocated to the various external lines using the table below.

### Trunk Access Codes

In the example shown below, IP1 to IP4 are SIP trunks and A5 is an analogue PSTN trunk line.

Dialling the digit 0 will select any trunk line.

Dialling \*91 will select the SIP trunk line IP1.

Dialling \*92 will select the SIP trunk line IP2.

Dialling \*93 will select the SIP trunk line IP3.

Dialling \*94 will select the SIP trunk line IP4.

Dialling \*95 will select the analogue PSTN trunk line A5.

Home
Trunk Access Codes
Help

Trunk Access	IP1	IP2	IP3	IP4	A5
0	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>
*91	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
*92	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
*93	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
*94	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>
*95	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input checked="" type="checkbox"/>
*96	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
*97	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
*98	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

1 2

Save
Back

---

---

## **3.8. Program other features using on-line Help**

---

---

Program all other features of the Opera 20 IP by clicking on the feature on the System Programming page and following the instructions in the comprehensive online Help available on every page.

## 4. Get Internet Access

### 4.1. Universal Plug and Play available on site

When the Opera system is powered up it broadcasts a Universal Plug and Play (UPnP) request to the Default Gateway address programmed in its IP Addresses table.

Field	Value
System Name	advantage.ie
IP Address	192.168.1.250
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.254
Preferred DNS Server	192.168.1.254
Alternate DNS Server	0.0.0.0

If the Opera system gets a positive response at the programmed Default Gateway address (default 192.168.1.254), it sets port forwarding at the Gateway, based on the settings in the Gateway Configuration page (see below). It also queries the Gateway for its WAN IP address (public IP address).

By default the Opera system implements port forwarding of UDP packets on ports 50000 to 50031 from the Gateway to the local IP address of the Opera system. Similarly, it implements port forwarding from the Gateway for TCP packets on port 5075. It also forwards port 7000 to port 80 on the Opera system to allow remote browser access.

Home		Gateway Configuration		Help	
Local IP Address		192.0.0.229			
UPNP Status		OK			
WAN IP Address		213.190.156.142			
Port	Enable Port Forwarding	WAN Port			
Diagnostic Logging Port (5040)	<input checked="" type="checkbox"/>	5040			
Streaming Diagnostic Logging Port (5041)	<input type="checkbox"/>	5041			
Call Logging Port (5070)	<input type="checkbox"/>	5070			
Http Port (80)	<input checked="" type="checkbox"/>	7000			
VoIP Signalling Port (5075)	<input checked="" type="checkbox"/>	5075			
VoIP RTP Ports (50000-50031)	<input checked="" type="checkbox"/>	50000-50031			
VoIP Networking Signalling Port (5076)	<input type="checkbox"/>	5076			
VoIP Networking RTP Voice Ports (7000-7099)	<input type="checkbox"/>	7000-7099			
Save		Back			

Note: For security, remote access to the Opera system browser is restricted to only those public IP address listed in the RAS IP addresses table.

## 4.2. If the modem router is not at the default Gateway IP address

If the default local IP address of the modem router has been altered from 192.168.1.254, the Opera system must be manually programmed with the IP address of the Default Gateway (i.e. the router) for Internet access. The local Default Gateway IP address is entered on the IP Settings browser page. This allows the Opera system to direct outgoing traffic to the correct Internet gateway. The Gateway Configuration page is updated automatically to display the Local IP Address entered (192.0.0.229 in the screen example shown above).

---

---

### **4.3. If the modem router does not support Universal Plug and Play**

---

---

If the SIP ports of the modem router are not open by default and it does not support UPnP, the appropriate WAN ports on the modem router Gateway must be forwarded manually by accessing the modem router Gateway browser programming as per the example in the Appendices.

UDP packets, typically on WAN ports 50000 to 50031 of the Gateway, should be forwarded to the local IP address of the Opera system and also TCP packets on port 5075 and packets on browser port 7000 on the Gateway should be forwarded to the Opera system port 80.

It may well be necessary to lower the level of Firewall protection, as described in Step 2 of the example in the Appendices.




## 5. Connect IP system phones

### 5.1. Connecting IP system phones

Connect the IP system phone LAN ports to the network as shown. The PC port on the IP telephone may be used to connect a PC, thus allowing a single cable from the desk to carry the PC traffic and the telephone traffic.

**Note: Do not connect any IP system phone to the LAN until the system has access to Internet;** otherwise the WAN address of the system (relayed by router UPnP) will not be captured by the IP system phone at powerup.

**Note: Do not power up the IP system phones until the system's IP address is in the correct range for the LAN, as described previously;** otherwise the IP system phones may be assigned IP addresses that are not within the same range as the system and auto discovery cannot work properly.

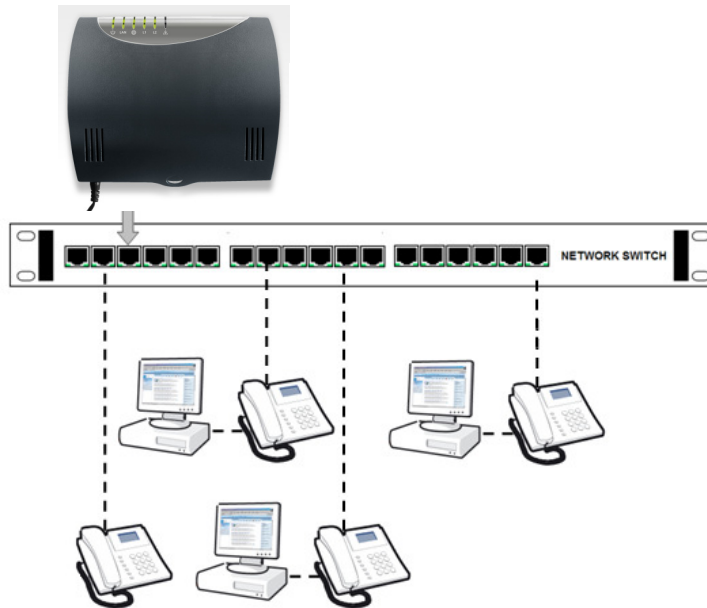

Connect the LAN port of the Operafone IP system phone (Executive or Professional) to the LAN using the Ethernet cable supplied with the phone.

---

## 5.2. Auto discovery of IP system phones on the LAN

---

When the IP system phone is plugged into a LAN and powered up by Power-over-Ethernet (PoE standard 802.3af) or from the mains via its plug-top adaptor, it auto-discovers the Opera 20 IP system on the LAN and is automatically allocated an IP registration name and an IP registration PIN. The system phone also stores the internal and the public IP addresses of the Opera system.

The phone is now ready for use.

Note: The Opera 20 IP system must be equipped with the appropriate software licenses if more than eight IP system phones are connected.

---

## 5.3. Connecting an IP system phone remotely across the public Internet

---

Once an IP system phone has learned its IP registration details by auto-discovery on a LAN, it may be connected to its Opera 20 IP system, securely, remotely over the public Internet by simply plugging it into a broadband router. It automatically registers with its remote Opera system, from anywhere in the world, over the public Internet.

If the phone had not been connected with its system on a LAN, the public IP address or url of the system must be entered at installation in the remote location; also the system phone's IP registration name and IP registration PIN (as they appear on the IP Phone Registration page in browser based system programming).

---

## 5.4. Entering the system phone IP registration parameters manually

---

If the system phone had not been connected with its Opera 20 IP system on a LAN before delivery to the end user location, the phone will prompt the user to enter the following parameters at power up at the remote location:

1. Public IP address of the server (remote Opera system).
2. User IP registration name
3. User IP registration PIN

These parameters may be altered at any time by depressing the Menus key on the IP system phone display for 10 seconds and scrolling and selecting the options required. For connection to the system, these three parameters entered on the IP system phone must correspond to those stored on the system, on the IP Phone Registration page.

## 5.5. User log-in to phone programming page

A user can easily manage their phone settings, personal phonebook, call forwarding and voicemails by logging into the Opera 20 IP from a PC. The Username, as listed on the User Names page, for example Extn 13, and the User PIN, as listed on the PIN codes page, are required.

If your PC is connected on the same network as the Opera 20 IP system, type the internal IP address of the Opera 20 IP into your browser:

<http://192.168.1.250>

This is the default IP address of the Opera 20 IP. In order to connect, the PC must have an IP address in the same range as the Opera 20 IP (i.e. 192.168.1.XXX), but different from the Opera 20 IP. If it does not, you must change the IP address of the PC or the Opera 20 IP as described in the Opera 20 IP user guide.

If you wish to connect to the Opera 20 IP from a remote location, type the WAN IP address of the system followed by the port number. For example-

<http://92.18.137.42:7000>

In the login panel type your username and password (User PIN) and your personal IP phone page will be displayed:

Home		User Programming (Tst 12)		Help	
Personal Address Book	*800 to *809	Go	Remote number:	<input type="text"/>	<input type="checkbox"/>
Do Not Disturb	Disabled		Function Keys	Go	
Forward All Calls	Disabled		Change Language	Nederlands (BE)	
Forward No Answer	Disabled	20 secs	Ringing Volume	65 %	
Forward On Busy	Disabled		Handset Volume	50 %	
External Number	<input type="text"/>		Headset Volume	50 %	
Alarm Call	00:00	Off	Speaker Volume	50 %	
Show Number	Enabled		LCD Contrast	75 %	
Pin Code	1234		Keypad Tones	On	
Voice Messages	None		Receive Page Call	On	
E-mail Address	<input type="text"/>		Phone Software	Not Connected	
Vicemail Forwarding	Disabled				

Save                      Reset                      Back

On this page you can search or edit your personal address book, set your call forwarding, programme an alarm call, change your PIN code, manage your voicemail and your phone settings.

If you are connecting to the system from a remote location you can use the remote office feature. This allows you to make and receive calls using the system phone number at a remote location. Type in the remote phone number, where you are currently located, in the 'Remote number' box. This can be a GSM or a fixed number. Type in the number you wish to call in the box 'Dial'. The system will first call you back at your remote number and then connect you to your required destination.

You can programme the keys on your phone as speed dials or function keys by pressing the 'Function keys' button.

Phone language and volume settings can also be programmed on this page.

---

---

## 5.6. Hotdesking

---

---

A user of the Opera 20 IP may register from any IP system phone connected to the system. Once you have entered your IP registration name and IP registration PIN at any IP system phone, all your calls will automatically ring at that phone. Each user's IP phone registration name and IP registration PIN are listed on the IP Phone Registration page in Browser based Programming.

If you arrive at a hot desk and the phone is registered to another user, you can re-register it to your own user account as follows. Press the menus key and hold it down for 5 seconds, scroll down to Registration Info and enter your IP registration name and IP registration PIN. This can be done by repeatedly pressing the dial keys to enter the characters. Press SET and then back and exit.

If the screen displays your extension number and a softkey called 'Activate', press the softkey to activate the phone.

## 6. Software licences for additional functionality

The Opera System may be expanded and enhanced by the installation of licences for extra capacity or new features such as:

- Additional SIP trunks to increase the number of VoIP connections to the public network
- Additional IP terminal capacity to increase the number of IP users on the system
- IP system phones on the WAN, for remote workers
- Voicemail boxes
- Auto Attendant answers and routes your calls automatically to the appropriate internal destinations efficiently and professionally
- Downloadable Music on Hold allows you to install several music files to be played to callers on hold
- Computer Telephony Integration
- SIP extensions on the LAN.
- Windows PC Softphone registration, for operation of a PC-based system phone.
- iPhone softphone registration
- Android softphone registration
- Call Record, for all external calls for a particular user, or selectable by the user on a per-call basis
- Telephone dial-in conference Meeting Room, for up to seven participants, with controlled access.
- VoIP Networking of multiple sites, across the Internet, into a single network.

Check with your system supplier to purchase these licences.

## 6.1. Installing software licences

Browse to the IP address of the system and enter the user name and password, e.g. admin, 1000 to get to the main programming page and then select the System Licences link.

The screenshot displays the main programming page of the Opera 20 IP System. The interface is organized into several columns of settings menus. The 'System Settings' menu on the left contains the following items: Unattended Transfer, Automatic Park, Trunk to Trunk Transfer, Pickup Restriction, Common Address Book, Auto-Attendant, Music on Hold, Music On Transfer, Waiting Tones, Ringing Cadences, System Properties, Administrator Password, Browser Language, System Maintenance, **System Licences** (highlighted with a red box), Remote Maintenance, Door Phone, Roaming PIN, Least Cost Routing, Logging Options, Select PSTN/ISDN Trunks, and Fewer Links. Other visible menus include 'User Settings', 'External Numbers', 'IP Settings', 'SIP Trunks', 'ISDN Trunks', 'Trunk Settings', 'Access Control', and 'Group Settings'. The top of the page shows 'Login', 'Revision: 12.041', and 'Help'.

User  
manuals

Paste the purchased licence keys into the box. Click "Save".

License Key #	License Key Value
License Key #0	d2f32ca3ca6d6fcaceba513e8e64d8299190d52489a51ab2edd62e2a32b4:
License Key #1	
License Key #2	
License Key #3	
License Key #4	
License Key #5	
License Key #6	
License Key #7	
License Key #8	
License Key #9	

Please note that the system must be restarted for new licences to take effect.

## 6.2. Licence activation

Once the licences have been loaded and the system restarted, go to the appropriate programming page, e.g. SIP Accounts, Automated Attendant or VoIP Networking, and activate the feature.

To activate IP user licences, go to the IP Phone Registration page.

User Number	Username	IP registration name	IP registration PIN	Auto-Discovery Pool	IP Address
1050	Declan Gibbons	pp11	2590	<input checked="" type="checkbox"/>	+192.168.1.157-OPD + 192.168.1.160-SIP
1041	Seamus	seamus@coran	2590	<input checked="" type="checkbox"/>	+192.168.1.161-OPD + 192.168.1.170-SIP
1009	Dave	pp16	2590	<input checked="" type="checkbox"/>	194.46.169.154-OPD + 192.168.1.164-OPD
1007	Gery	pp14	2590	<input checked="" type="checkbox"/>	+192.168.1.165-OPD
1043	Gery	pp15	2590	<input checked="" type="checkbox"/>	+192.168.1.175-OPD + 192.168.1.175-SIP
1017	Sean	pp17	2590	<input checked="" type="checkbox"/>	88.44.214.25-OPD + 192.168.1.151-OPD
1096	Pat	pp13	2590	<input checked="" type="checkbox"/>	192.168.1.145-OPD
1030	Eva	pp18	2590	<input checked="" type="checkbox"/>	+192.168.1.163-OPD + 192.168.1.159-SIP
1048	John	pp19	2590	<input checked="" type="checkbox"/>	+192.168.1.160-OPD + 192.168.1.149-SIP
1091	Fergal	pp20	2590	<input checked="" type="checkbox"/>	+192.168.1.166-OPD
1046	Dave1046	pp21	2590	<input checked="" type="checkbox"/>	192.168.1.179-OPD
1002	Kevin	pp22	2590	<input checked="" type="checkbox"/>	+192.168.1.156-OPD
1095	Dave	pp23	2590	<input checked="" type="checkbox"/>	Not Connected
1096	Michael Forkin	pp24	2590	<input checked="" type="checkbox"/>	192.168.1.192-OPD
1044	John	pp25	2591	<input checked="" type="checkbox"/>	192.192.216.154-OPD + 192.168.1.171-OPD
1083	Pat	pp26	2590	<input checked="" type="checkbox"/>	192.168.1.163-OPD + 192.168.1.155-SIP
85	Extn	Ext1007	2590	<input checked="" type="checkbox"/>	Not Connected
1040	Michael Collins	Ext1040	2590	<input checked="" type="checkbox"/>	+192.168.1.145-OPD
1097	Extn	Ext1096	2590	<input checked="" type="checkbox"/>	Not Connected
1025	Tom	pp1025	2590	<input checked="" type="checkbox"/>	Not Connected
1023	Aidan	Aw1023	1235	<input checked="" type="checkbox"/>	+192.168.1.174-OPD
1010	Meeting	Ext1010	2590	<input checked="" type="checkbox"/>	Not Connected
71	Extn	pp33	2567	<input type="checkbox"/>	Not Connected
72	Extn	pp34	6429	<input type="checkbox"/>	Not Connected

Click on the “Licensing” link to display the following page.



User Number	Username	Enable Remote SIP Available (AI)	Enable Soft SIP Available(AI)	Enable WLAN SIP Available (AI)	Enable 3C SIP Available(AI)
1030	Declan	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1041	Seamus	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1009	Dave	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1007	Gary	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1043	Gary	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1017	Sean	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1096	Pat	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1030	Eva	<input checked="" type="checkbox"/>	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1045	John	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1091	Fergal	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1046	Deval1046	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1002	Kevin	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1095	Dave	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1096	Michael	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1044	John	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1083	Pat	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
85	Extn	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1040	Michael	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1097	Extn	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1025	Tom	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1023	Aidan	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
1010	Meeting	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
71	Extn	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
72	Extn	<input checked="" type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

Registration Save Back

Tick the box corresponding to the extension user for whom the relevant feature licence should be activated. Then click "Save".

Click on the Registration link to return to the previous page where the IP Registration Name and PIN may be altered.

## Appendix I Power over Ethernet and Ethernet cable specifications


### Power over Ethernet

802.3 af, class 1 device.

5 Watts required per phone.

### Standard Ethernet Cable

Ethernet cable is used to connect a hub to the system.

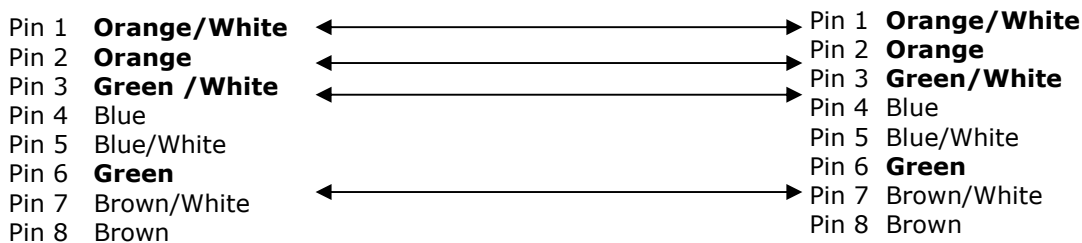

## Appendix II System Tones

The following is a list of tones that are used on the system -

<b>Internal Dial Tone</b>	Continuous
<b>Busy Tone</b>	500mS On - 500msS Off - 500mS On - 500mS Off.....
<b>Ringing Tone</b>	1 Sec On - 4 Sec Off - 1 Sec On - 4 Sec Off.....
<b>Hold Tone</b>	30mS On - 100mS Off - 30mS On - 2 Sec Off - 30mS On - 100mS Off.....
<b>Congestion Tone &amp; Call Proceeding Tone</b>	250mS On - 250mS Off -250mS On - 250mS Off.....
<b>Success Cadence</b>	500mS On - 55mS Off - 500mS On - 55mS Off.....
<b>Failure Cadence</b>	87mS On - 87mS Off - 87mS On - 87mS Off.....
<b>Alert Tone</b>	5 Sec Off: 120mS On - 9 Sec Off - 120mS On - 9 Sec Off.....
<b>DND/Diversion Tone</b>	500mS On - 55mS Off - 500mS On - 55mS Off.....

**Note:** Sec = Seconds  
mS = milli-Seconds

## Appendix III Compatibility with third party headsets and analogue phones

### Headsets

The full range of Plantronics 'H' Top Headsets works on the Operafone Executive system phone. The headset plugs directly into the headset port using a Vista to QD (Quick Disconnect) Cable.

Product Range	Part Code	Description
Advantage Cable	26716-01	Vista Headset to QD (Quick Disconnect)
Supra	32184-04	H51 Headset (One Ear + Headband)
	32186-04	H51N Noise Cancelling Headset (One Ear + Headband)
Tristar	33647-01	H81 Tristar Headset (Over One Ear)
	33693-01	H81N Noise Cancelling Tristar Headset (One Over Ear)
Encore	33645-41	H91 Headset (One Ear + Headband + Treble / Bass Control)
	33699-41	H91N Noise Cancelling Headset (1 Ear + Headband + Treble/Bass Control)
	33646-11	H101 Headset (Two Ear + Headband + Treble / Bass Control)
	33705-11	H101N Noise Cancelling Headset (Two Ear + Headband + Treble / Bass Control)
DuoPro	36363-01	DuoPro H171 Combo Headset (One Ear+Headband & Over Ear)
	36366-01	DuoPro H171N Noise Cancelling Combo Headset (One Ear+Headband & Over Ear)
	36568-01	DuoPro H181 Headset (Behind the Head)

## Analogue phones

Compatibility of some analogue phones with MDS Opera systems:

	ULYTEL II PHONE WITH MESSAGE WAITING	SIEMENS EUROSET 2010	SIEMENS EUROSET 2015	SIEMENS GIGASET 4010 CLASSIC	SIEMENS EIRCOM 4012	SIEMENS EIRCOM 5012 COLOUR	SIEMENS GIGASET C 150	SIEMENS EIRCOM 4012 MICRO
Last Number Redial	Yes	Yes	Yes	Yes	Yes			
Time Break Recall (transfer, etc)	Yes	Yes	Yes	Yes	Yes			
Rings with a different Internal and External Ring Cadence	Yes	No *	Yes	No*	Yes			
Message Waiting audible indication	Yes	Yes	Yes	Yes	Yes			
Message Waiting visual indication	No	Not applicable	Not applicable	Not applicable	Yes			
Caller Display (CLI)	No	No	No	Yes	Yes			
Programmable keys can be Programmed as MDS PABX function keys	Yes**	Yes	Yes	N/A	N/A	N/A	N/A	N/A

\* Does not differentiate between Internal and External ring cadence. Rings with one cadence only.

\*\*It is necessary to insert a Pause after Recall when programming function keys.

### Appendix IV Miscellaneous timer settings

No	TIMER	Default	New Setting	Maximum	Minimum
1	Transfer Timeout	30 secs		3 mins	5 secs
2	Parked Call Timeout	3 mins		15 mins	10 secs
3	Forward No Answer Timeout	20 secs		3 mins	5 secs
4	Normal Disconnect Timer	20 secs		1 min	0 secs
5	Handsfree Disconnect Timer	3 secs		1 min	0 secs
6	Pause Timer	2 secs		1 min	0 secs
7	Maximum Voice Message Length	90 secs		180 secs	0 secs
8	Browser Timeout	15 mins		15 mins	30 secs
9	Phone Menu Timeout	60 secs		3 mins	15 secs
10	Call Back Timer 1	10 secs		15 mins	0 secs
11	Call Back Timer 2	20 secs		15 mins	0 secs
12	Call Back Timer 3	60 mins		4 hours	1 min
13	Roaming PIN Timer	30 secs		15 mins	0 secs
14	Hotline Timer	10 secs		60 secs	0 secs
15	Internet Disconnect Timer	3 mins		999 secs	1 secs
16	Trunk To Trunk Timer	2 mins		999 secs	10 secs
17	Trunk Line Supervision	90 msecs		999 msecs	60 msecs

## Appendix V Environmental Specifications

Operating temperature	-5C to + 45C
Humidity	10% to 90% non-condensing
Mains voltage	110 & 230 $\pm$ 10%
Max power consumption	10W
<u>Maximum AC V/A:</u>	<u>120VA</u>
<u>Maximum input watts:</u>	<u>11W</u>
<u>Maximum input current at 230Vac:</u>	<u>0.242A</u>
<u>Power Factor:</u>	<u>0.55</u>
Extreme working conditions	-15C to + 55C
Storage temperature	-20C to + 70C
Storage humidity	10% to 90% non-condensing

## Appendix VI User settings, trunk accesses, ringing assignments and CLIs

**USER SETTINGS TABLE 1 (IP Users)**

User	New User Number	New User Name	Trunk Line Access								Level of Access							Users with Operator Functionality Enabled
			T/L1	T/L2	T/L3	T/L4	T/L5	T/L6	T/L7	T/L8	1	2	3	4	5	6	7	
11																		
12																		
13																		
14																		
15																		
16																		
17																		
18																		
19																		
20																		
21																		
22																		
23																		
24																		
25																		
26																		
27																		
28																		
29																		
30																		
31																		
32																		
33																		
34																		

The default settings are - all users have access to all trunk lines  
 - all users have unrestricted access Level 5

**USER SETTINGS TABLE 1 (Analogue Extensions)**

User	New User Number	New User Name	Trunk Line Access								Level of Access							Users with Operator Functionality Enabled
			T/L1	T/L2	T/L3	T/L4	T/L5	T/L6	T/L7	T/L8	1	2	3	4	5	6	7	
41																		
42																		
43																		
44																		
45																		
46																		
47																		
48																		
49																		
50																		
51																		
52																		
53																		
54																		
55																		
56																		
57																		
58																		
59																		
60																		
61																		
62																		
63																		
64																		

The default settings are - all users have access to all lines  
 - all users have unrestricted access Level 5

**USER SETTINGS TABLE 2 (IP Users)**

User	External Call Waiting		Internal Call Waiting		Intrude		Intrude Protection		Call Pick-Off		Call Pick-Up		Do Not Disturb (DND)		DND Override		Call Diversion		Conference		Internal Paging		Direct Line Seizure (DLS)		User Programming		Voice Mail		Voice Mail Password		Call Back		Called Party		Missed Call List		Roaming PIN Extensions	
	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N
11	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
12	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
13	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
14	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
15	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
16	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
17	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
18	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
19	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
20	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
21	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
22	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
23	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
24	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
25	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
26	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
27	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
28	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
29	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
30	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
31	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
32	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
33	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	
34	↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓		↓	

D: Default Setting

N: New Setting



**USER SETTINGS TABLE 2 (Analogue Users)**

User	External Call Waiting		Internal Call Waiting		Intrude		Intrude Protection		Call Pick-Off		Call Pick-Up		Do Not Disturb (DND)		DND Override		Call Diversion		Conference		Internal Paging		Direct Line Seizure (DLS)		User Programming		Voice Mail		Voice Mail Password		Call Back		Called Party		Missed Call List		Roaming PIN Extensions	
	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N	D	N
41	√				√							√		√				√				√		√		√		√		√		√		√		√		
42	√				√							√		√				√				√		√		√		√		√		√		√		√		
43	√				√							√		√				√				√		√		√		√		√		√		√		√		
44	√				√							√		√				√				√		√		√		√		√		√		√		√		
45	√				√							√		√				√				√		√		√		√		√		√		√		√		
46	√				√							√		√				√				√		√		√		√		√		√		√		√		
47	√				√							√		√				√				√		√		√		√		√		√		√		√		
48	√				√							√		√				√				√		√		√		√		√		√		√		√		
49	√				√							√		√				√				√		√		√		√		√		√		√		√		
50	√				√							√		√				√				√		√		√		√		√		√		√		√		
51	√				√							√		√				√				√		√		√		√		√		√		√		√		
52	√				√							√		√				√				√		√		√		√		√		√		√		√		
53	√				√							√		√				√				√		√		√		√		√		√		√		√		
54	√				√							√		√				√				√		√		√		√		√		√		√		√		
55	√				√							√		√				√				√		√		√		√		√		√		√		√		
56	√				√							√		√				√				√		√		√		√		√		√		√		√		
57	√				√							√		√				√				√		√		√		√		√		√		√		√		
58	√				√							√		√				√				√		√		√		√		√		√		√		√		
59	√				√							√		√				√				√		√		√		√		√		√		√		√		
60	√				√							√		√				√				√		√		√		√		√		√		√		√		
61	√				√							√		√				√				√		√		√		√		√		√		√		√		
62	√				√							√		√				√				√		√		√		√		√		√		√		√		
63	√				√							√		√				√				√		√		√		√		√		√		√		√		
64	√				√							√		√				√				√		√		√		√		√		√		√		√		

D: Default Setting

N: New Setting

Index	MSN/ LINE NUMBER	RINGING ASSIGNMENT				
		(Enter the extensions to ring for the MSN/Line for each ringing mode)				
		DAY RINGING	NIGHT RINGING	MODE 3	MODE 4	MODE 5
1						
2						
3						
4						
5						
6						
7						
8						
9						
10						
11						
12						
13						
14						
15						
16						
17						
18						
19						
20						
21						
22						
23						
24						
25						
26						
27						
28						
29						
30						
31						
32						
33						
34						
35						
36						
37						
38						
39						
40						
41						
42						
43						
44						
45						
46						
47						
48						
49						
50						

RINGING ASSIGNMENT TABLE

**USER CLI TABLE**

<b>USER</b>	<b>CLI NUMBER</b>	<b>CLI RESTRICTION SET</b>	<b>USER</b>	<b>CLI NUMBER</b>	<b>CLI RESTRICTION SET</b>
11			11		
12			12		
13			13		
14			14		
15			15		
16			16		
17			17		
18			18		
19			19		
20			20		
21			21		
22			22		
23			23		
24			24		
25			25		
26			26		
27			27		
28			28		
29			29		
30			30		
31			31		
32			32		
33			33		
34			34		

## Appendix VII Common Address Book Table

	NUMBER	NAME	Barred	Prefix		NUMBER	NAME	Barred	Prefix		NUMBER	NAME	Barred	Prefix		NUMBER	NAME	Barred	Prefix	
1					51					101					151					
2					52					102					152					
3					53					103					153					
4					54					104					154					
5					55					105					155					
6					56					106					156					
7					57					107					157					
8					58					108					158					
9					59					109					159					
10					60					110					160					
11					61					111					161					
12					62					112					162					
13					63					113					163					
14					64					114					164					
15					65					115					165					
16					66					116					166					
17					67					117					167					
18					68					118					168					
19					69					119					169					
20					70					120					170					
21					71					121					171					
22					72					122					172					
23					73					123					173					
24					74					124					174					
25					75					125					175					
26					76					126					176					
27					77					127					177					
28					78					128					178					
29					79					129					179					
30					80					130					180					
31					81					131					181					
32					82					132					182					
33					83					133					183					
34					84					134					184					
35					85					135					185					
36					86					136					186					
37					87					137					187					
38					88					138					188					
39					89					139					189					
40					90					140					190					
41					91					141					191					
42					92					142					192					
43					93					143					193					
44					94					144					194					
45					95					145					195					
46					96					146					196					
47					97					147					197					
48					98					148					198					
49					99					149					199					
50					100					150					200					

## Appendix VIII IP Addresses and RAS Tables

System Details	DEFAULT SETTING	NEW SETTING
IP Address	192.168.1.250	___ . ___ . ___ .
Subnet Mask	255.255.255.0	___ . ___ . ___ .
HTTP Port	80	

ISP DETAILS	
ISP Telephone Number	
Account Name	
Password	

DATA CALL MANAGEMENT		
Maximum Number of Data Calls	4	
Maximum Number of ISP Calls	6	
Maximum Number of RAS Calls	2	
Number of Users per ISP Call	4	

RAS ACCOUNTS		
INDEX	USERNAME	PASSWORD
1		
2		
3		
4		
5		
6		
7		
8		
9		
10		

REMOTE ACCESS SERVER RAS IP ADDRESSES	
Index	IP Address
1	
2	
3	
4	
5	
6	
7	
8	

	<b>REMOTE ACCESS NUMBERS</b>
<b>Opera 20 IP System Manual</b>	
<b>1</b>	
	<b>CLI LIST</b>
<b>1</b>	
<b>2</b>	
<b>3</b>	
<b>4</b>	
<b>5</b>	
<b>6</b>	
<b>7</b>	
<b>8</b>	
<b>9</b>	
<b>10</b>	

<b>INTERNET BARRING</b>			
<b>INDEX</b>	<b>PC NAME (to identify IP Address with a user)</b>	<b>IP NUMBER</b>	<b>BARRED (tick if barred)</b>
1			
2			
3			
4			
5			
6			
7			
8			
9			
10			
11			
12			
13			
14			
15			
16			
17			
18			
19			
20			

## Appendix IX Call Logging outputs and formats

The system outputs Call Logging Records for all external calls, both incoming and outgoing, over the Ethernet port. The Call Logging Report can be generated using HyperTerminal over the Ethernet Connection using a TCP/IP port.


In order to make it easier to read the output, each field is right justified (i.e. padded with spaces) and separated from the next field by a comma. This output may be extracted and used by external applications (for example, Microsoft Excel) to generate reports and accumulate statistics. (It is beyond the scope of this guide to describe how to use this output with external applications).

Connect a PC (Windows operating system) to the system LAN Port:



- Open the <Start> menu
- Click On <Programs>
- Click On <Accessories>
- Click On <Communications>
- Click on <HyperTerminal>

The window alongside will be shown

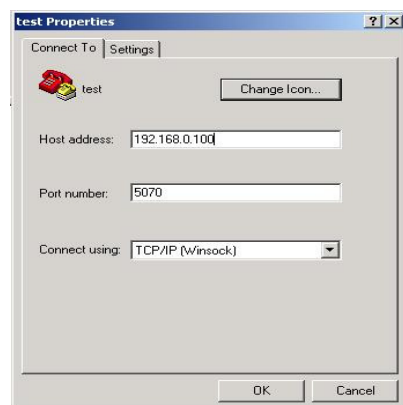

- In the **Connect Using** field, select the TCP/IP (Winsock) setting
- Enter the IP address of the system in the **Host Address** field (by default, **192.168.0.100**)
- Enter the **Port number**. This is always **5070**

The HyperTerminal window appears. When an incoming/outgoing call is detected on the system, a Call Logging Record will be generated at the end of the call.

## Example of the call logging output to hyperterminal

```

199000,
315,12/08/04,14:20:54,      Line 01,      654,      John Lawler,O,Y, 00:00:
199000,
316,12/08/04,14:21:04,      Line 03,      623,      Gary Nolan,I,Y, 00:02:
8160000,
317,12/08/04,14:23:21,      Line 06,      623,      Gary Nolan,O,N, 00:00:
05288669,
319,12/08/04,14:23:54,      Line 01,      676,      Courtney Murphy,O,Y, 00:01:
2800395,
318,12/08/04,14:23:36,      Line 05,      623,      Gary Nolan,I,Y, 00:01:
8160000,
318,12/08/04,14:24:57,      Line 05,      674,      Andrew Bradley,T,Y, 00:02:
8160000,
320,12/08/04,14:25:43,      Line 01,      676,      Courtney Murphy,O,Y, 00:03:
0866052444,
321,12/08/04,14:29:06,      Line 01,      676,      Courtney Murphy,O,Y, 00:03:
05280669,
322,12/08/04,14:34:42,      Line 05,      627,      Declan Gibbons,I,Y, 00:00:
8160000,
323,12/08/04,14:35:15,      Line 01,      612,      Kevin Kenny,I,Y, 00:04:
8160002,
325,12/08/04,14:45:26,      Line 03,      616,      Dave Victory,I,Y, 00:00:
8160009,

```

## Call Logging format table

The format of the call logging data that is sent to the PC consists of 17 distinct fields of variable length that provide a comprehensive list of attributes for each call as listed below.

Field ID	Description	Size (Bytes)	Details
01.	Call ID	5	Numeric index to reference the call record.
02.	Date	8	Date of call in the format DD/MM/YY.
03.	Time	8	Time of call in the format HH:MM:SS.
04.	Line Number	20	Alphanumeric representation of Line number (e.g. Line 01)
05.	Extension number	20	Numeric representation of extension number (e.g. 623)
06.	Extension Name	20	Alphanumeric representation of extension name (e.g. Joe Bloggs)
07.	Call Type	1	I= Incoming (Voice) O= Outgoing (Voice) T= Transferred N= Internet (Data) R= Remote Access C= Time Retrieval D= Software Download
08.	Connection	1	Y = Yes N = No
09.	Voice Card	1	V = Voice Mail A = Auto-Attendant
10.	Call Duration	8	Duration of call in the format HH:MM:SS (connected time)
11.	Ring Time	5	Duration of ringing in the format MM:SS
12.	Calling Number	20	Alphanumeric (CLI or "Unknown" if CLI not provided)



13.	Calling Name	20	Alphanumeric (if there is a match found in the Common Address Book)
14.	Called Number	20	Alphanumeric (Called Number/MSN of Called Party)
15.	Called Name	20	Alphanumeric
16.	Roaming PIN	2	Numeric representation of a roaming PIN User No. (e.g 02) for Roaming PIN user 02
17.	Call Cost	8	Numeric representation of the cost of the call in Euros

### Logging Incoming Calls

When an incoming call is answered by an extension, the “Call Type” (field 7) and “Connection” (field 8) fields are updated to “I” and “Y” respectively in the HyperTerminal window at the end of the call:

*Example of a call record for an incoming call that is answered*

1, 12/08/04, 17:30:02, Line 03, 654, John Lawler, I, Y, , 00:00:44, 00:05, 0872979676, , 8160058, .....

1	2	3	4	5	6	7	8	9	10	11	12	13	14	.....
---	---	---	---	---	---	---	---	---	----	----	----	----	----	-------

### Logging Outgoing Calls

When an outgoing call is made by an extension, the “Call Type” (field 7) and “Connection” (field 8) fields are updated to “O” and “Y” respectively in the HyperTerminal window at the end of the call:

2, 12/08/04, 17:12:01, Line 01, 676, Joe Bloggs, O, Y, , 00:00:03, 00:24, 8160016, , 05280669, .....

1	2	3	4	5	6	7	8	9	10	11	12	13	14	.....
---	---	---	---	---	---	---	---	---	----	----	----	----	----	-------

### Logging Voice Mail Calls

An incoming call that is directed to a user’s Voice Mail will generate a call record as described for incoming calls. The “Voice Mail” field, 9, is updated to ‘V’ when the line is connected to a voice mail channel. The “Connection” field (field 8) will be “Y” or “N” depending on whether the calling party left a message on the extension’s mailbox. Connection = ‘Y’ (“message left”)

*Example of a call record for an incoming call that was answered by the voicemail and then left a message:*

3, 12/08/04, 17:16:02, Line 02, 8160058, , I, Y, V, 00:00:39, 00:00, 8160058, .....

1	2	3	4	5	6	7	8	9	10	11	12	.....
---	---	---	---	---	---	---	---	---	----	----	----	-------

## Logging Transfer Calls

Two call logging records are generated when an incoming call is answered by an extension and then transferred to another extension on the system. The “Call Type” (field 7) is updated to ‘T’ on the transferred call to indicate that it is a ‘Transfer’ type of call. The “Call ID” (field 1) remains the same for both records.

*Example of a call record for an incoming call that was answered by Joe Bloggs and transferred to Jane Doe.*

4 , 12/08/04, 17:16:02, Line 02, 627 , Joe Bloggs, I, Y , , 00:00:20, 00:03, 8160058, .....

4 , 12/08/04, 17:16:22, Line 02, 628 , Jane Doe , T, Y , , 00:00:39, 00:05, 8160058, .....

1	2	3	4	5	6	7	8	9	10	11	12
---	---	---	---	---	---	---	---	---	----	----	----

## Logging Externally Forwarded Calls

If a user has externally forwarded his/her extension, there will be **2 separate** Call records (i.e. there are 2 separate Call IDs) for an incoming call that is externally forwarded. In both of these records the Extension Number, Extension Name & the Calling Number of the forwarding extension are stored.

## Logging Auto-attendant Calls

If an incoming call is answered by the Auto-attendant then field 9 is updated to “A”. If the call is then answered by an extension, there is a separate Call Logging record (with the same Call ID) created for the answering extension as if the call had been transferred to the user

*Example of a call record for an incoming call that is answered by the Auto-attendant and subsequently answered by an extension.*

5 , 12/08/04, 18:26:02, Line 04, 600 , Reception , I, Y, A , 00:00:10, 00:05, 0871738729, .....

5 , 12/08/04, 18:26:12, Line 04, 627 , Joe Bloggs , I, Y , , 00:00:25, 00:03, 0871738729, .....

1	2	3	4	5	6	7	8	9	10	11	12
---	---	---	---	---	---	---	---	---	----	----	----

## Logging Time From Network Calls

The Opera system can be programmed to automatically make a call on power-up in order to extract the time provided by the ISDN network. This call will immediately be cleared down as soon as the connection is established and the time information has

been extracted from the connect message. When a “retrieve time from network” call is made the “Call Type” ( field 7 ) is updated to “**C**”

*Example of a call record for an automatically generated call on power-up to extract the time from the ISDN network.*

7 , 12/08/04, 18:12:01, Line 01, , , **C** , **Y** , , 00:00:01, 00:02, , , 1191, Network Time , .....

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	.....
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	-------

### Logging Remote Access Calls

The Opera provides users with the ability to ring into the system to access the System Browser Programming or the LAN to which the system is connected. When a remote access call is made the “Call Type” ( field 7 ) is updated to “**R**”

*Example of a call record for a Remote Access call.*

8 , 12/08/04, 18:12:01, Line 01, , , **R** , **Y** , , 00:35:17, 00:02, 8160433 , Home Office, , , .....

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	.....
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	-------

### Logging Software Download Calls

The Opera system can receive software upgrades by connecting to a download server over an ISDN line. These calls are initiated by a user on the system. When a software download call is made the “Call Type” ( field 7 ) is updated to “**D**”

*Example of a call record for a software download call.*

9 , 12/08/04, 18:52:01, Line 01, , , **D** , **Y** , , 00:03:47, 00:02, 8160410 , Administrator , , , .....

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	.....
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	-------

### Logging 3-Party Conference Calls

A 3-Party conference consists of 2 calls being on the same line at the same time, therefore there will be 2 active Call Logging Records with the same line number. There is no separate field on the Call logging record to indicate that a 3Pty conference has occurred.

### Roaming PIN

If the Call is made from a **roaming pin enabled** extension using a roaming pin profile defined in browser based programming then the roaming pin field is filled in with the user number that enabled it at that extension.

*Example of a call record for a call made from Joe Blogg's extension using the roaming PIN profile defined for User 03. .*

10 , 13/08/04, 16:12:01, Line 01, 676, Joe Bloggs, O, Y, , 00:01:03, 00:24, , , 05281169, , 03,

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----

### Advice Of Charge (AOC)

This feature if enabled by the Network will present to the Opera system the cost of the call. The system will then provide this information at the end of the call ( In euros ) in the "Call Cost" field ( Field 17 ) of the call logging output.

*Example of a call record for an AOC enabled line showing the cost of the Call.*

11 , 15/08/04, 18:07:05, Line 04, 676, Joe Bloggs, O, Y, , 00:25:03, 00:04, , , 05281169, , , 1.20

1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17
---	---	---	---	---	---	---	---	---	----	----	----	----	----	----	----	----


## Diagnostic Logging

In addition to providing the call logging information for voice calls on the system, the Opera also has the ability to record details on data type calls ( calls made to the internet ) and provide system diagnostic logs for debug purposes on the ethernet port of the system.

### Streaming Diagnostic Logging

The Opera system provides diagnostic information which may be used to aid an installer to debug any potential technical problems that might arise at a particular site. This information is a detailed technical synopsis of the state of the system. The streaming diagnostic information is a real-time debug facility that shows the state of the system as actions are being performed.

This data output is sent on port **5041**



```

bChannel 13 (61)(connected->failbusy), app(1009), capp(1009)
T_SendDisconnect 17
TE -> NT (0): 00 01 04 08 08 01 36 45 08 02 80 90
bChannel 11 (59)(connected->failbusy), app(1003), capp(1003), cID(110)
bChannel 11 (59)(failbusy->failbusy), app(1003), capp(1003)

-->REMOVING CALLID (110) : Count (0) @ (16:02 Wed 25/08/04)
2 app in use, 0 grp in use
bChannel 13 (61)(failbusy->failbusy), app(1009), capp(1009)


Relcom Cause - 0 - (OK)
16.ReleaseComplete (Tint_Release_Req)
bChannel 13 (61)(failbusy->idle), app(1009), capp(1009)
TE <- NT (0): 02 01 08 06 08 01 b6 4d
TE -> NT (0): 00 01 06 0a 08 01 36 5a

Relcom Cause - 0 - (OK)
17.ReleaseComplete (Tint_Disconnect_Req)
bChannel 11 (59)(failbusy->idle), app(1003), capp(1003)
}}^}^ TE <- NT (0) DISC: tei 0, ai 0
TE -> NT (0) UA: tei 0, ai 0
TE -> NT (0) SABME: tei 0, ai 0
TE <- NT (0) UA: tei 0, ai 0
3)^}^}^}}^{}^}^}^}^}_{

```

## Buffered Diagnostic Logging

The Opera system contains a buffered record of the most recent actions performed on the system. This buffered information is dumped out en-bloc to provide a history of the most recent actions of the system. This data output is sent on port **5040**

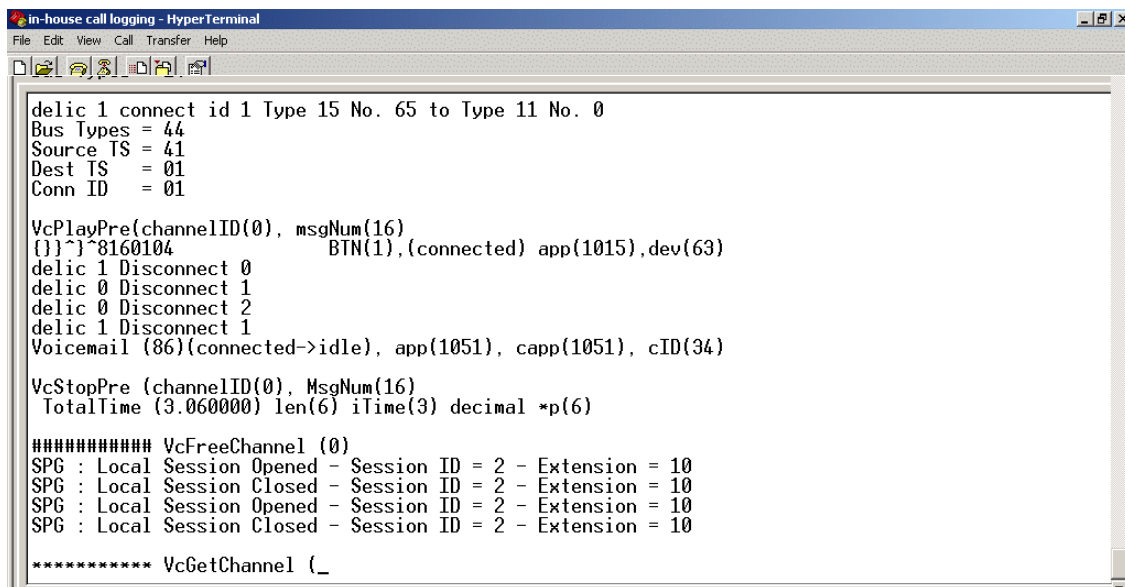

```

in-house call logging - HyperTerminal
File Edit View Call Transfer Help
delic 1 connect id 1 Type 15 No. 65 to Type 11 No. 0
Bus Types = 44
Source TS = 41
Dest TS = 01
Conn ID = 01

VcPlayPre(channelID(0), msgNum(16)
{}^}^8160104      BTN(1),(connected) app(1015),dev(63)
delic 1 Disconnect 0
delic 0 Disconnect 1
delic 0 Disconnect 2
delic 1 Disconnect 1
Voicemail (86)(connected->idle), app(1051), capp(1051), cID(34)

VcStopPre (channelID(0), MsgNum(16)
TotalTime (3.060000) len(6) iTime(3) decimal *p(6)

##### VcFreeChannel (0)
SPG : Local Session Opened - Session ID = 2 - Extension = 10
SPG : Local Session Closed - Session ID = 2 - Extension = 10
SPG : Local Session Opened - Session ID = 2 - Extension = 10
SPG : Local Session Closed - Session ID = 2 - Extension = 10


***** VcGetChannel (_

```

## Appendix X Example: how to configure port forwarding on the Netopia modem router Cayman 3346

This section describes how to configure port forwarding for Voice over IP traffic on the Netopia Modem Router Cayman 3346.

In this example voice traffic coming from the Internet to the Opera system (called Advantage here) in the Office location is routed through the Netopia ADSL Modem router as shown in the diagram below. This modem router device implements a firewall to protect the internal LAN from intrusion from the Internet. The firewall must be opened up to allow voice traffic from the Internet to pass through and it must be configured to forward this voice traffic to the internal IP address of the Opera system.

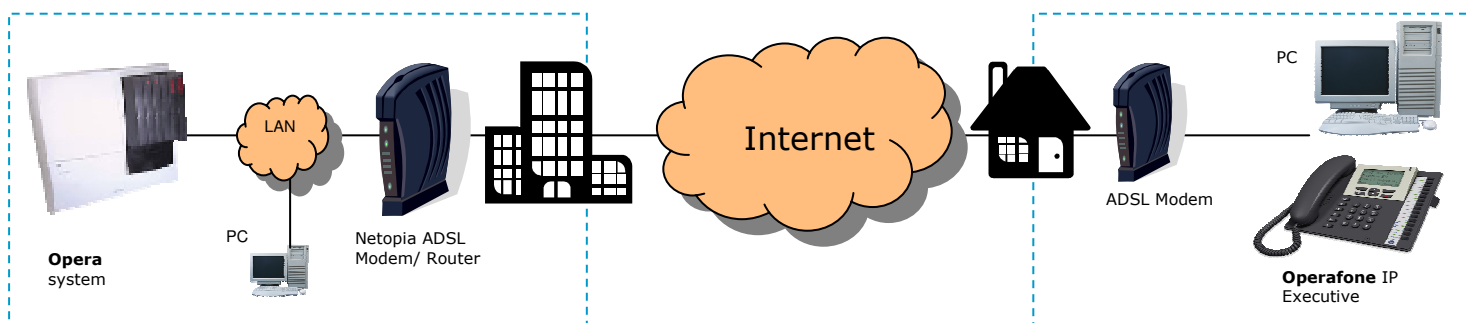

## Step 1 Connect to the home page.

Using a PC connected on the LAN as shown in the diagram, open a browser and type in the LAN IP address of the Netopia Modem Router. The default IP address is 192.168.1.254. This may have been changed however by the LAN administrator at installation. In this case check with the LAN administrator and enter the current address. When this is done the home page of the modem/router is displayed as shown below.

The screenshot displays the eircom broadband modem/router home page. The browser address bar shows the URL `http://192.168.1.254/indexRES.htm?homeRES.htm`. The page features a blue header with the eircom broadband logo and a left sidebar with navigation links: Home, Firewall, Custom Services, Expert Mode, Troubleshoot, and Help. The main content area is divided into three sections: Connection Information, Router Information, and Local Network.

**Connection Information**

DSL	<b>Down</b>	eircom broadband	<i>Disconnected</i>
User Name	eircom@eircom.net		
IP Address	0.0.0.0		
Primary DNS Server	Name server not available Unavailable		
Secondary DNS Server	Name server not available Unavailable		
Speed	0/0 (kbps)		
Line Attenuation	0/0 dB		

Buttons: Restart Connection, Connect

---

**Router Information**

Router Name	Netopia	Model	3346
Serial Number	13152424	MAC Address	00:00:c5:c8:b0:a8
Software Version	7.4.2r2	Warranty Date	5/6/2004

---

**Local Network**


IP Address	192.168.1.254	Ethernet	<i>Connected</i>
------------	---------------	----------	------------------

If you have difficulty connecting to this home page, please check that the PC you are using has an IP address in the same subnetwork range as the Netopia modem router.

## Step 2 Lower the level of Firewall protection

Click on the link Firewall in the top left corner of this page and the following screen will be displayed


Set the level of firewall protection to LOW and press the button 'Save Changes'.

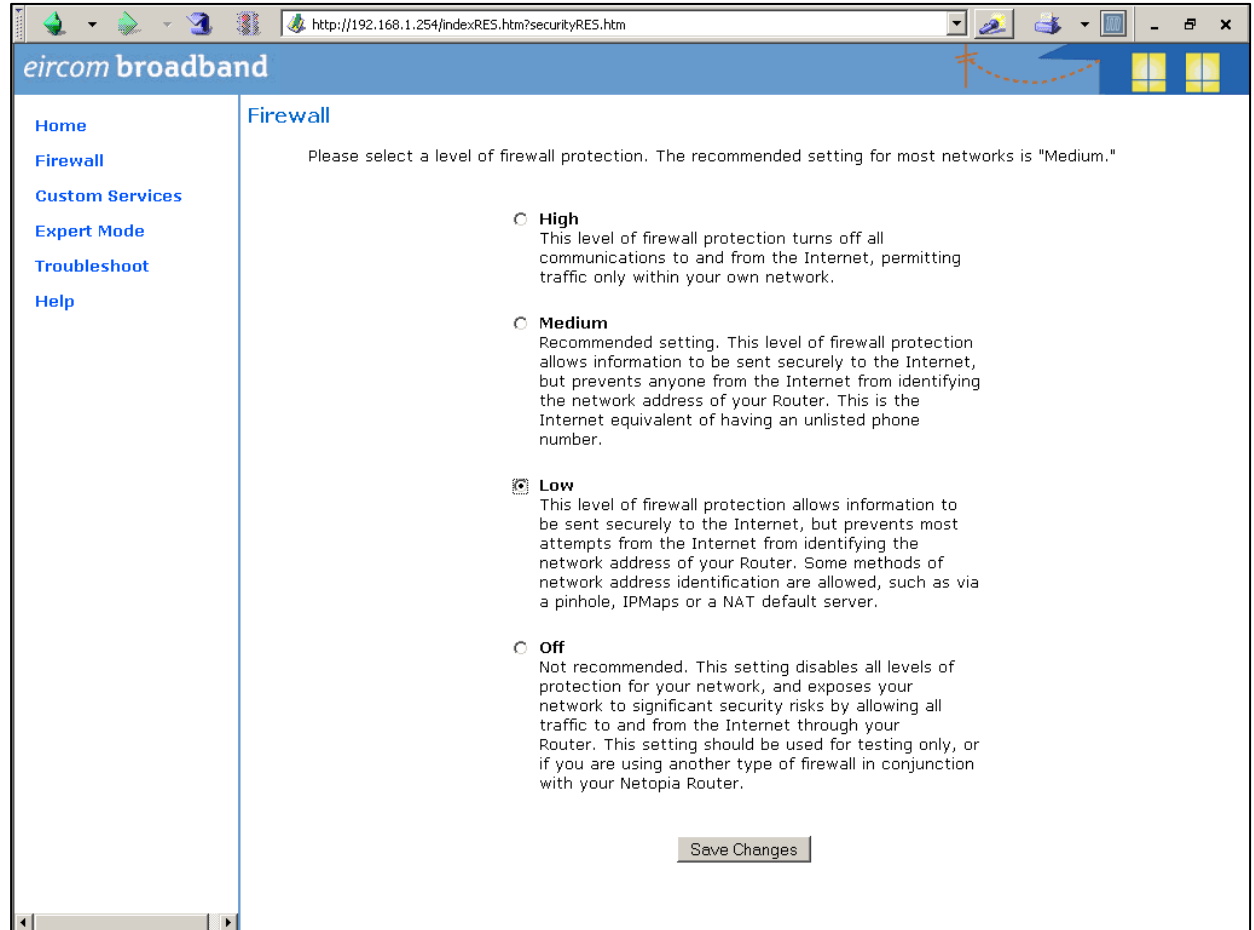




### Step 3 Define the port forwarding for TCP

Click on the link 'Custom Services' on the top left corner of the screen and the following screen is displayed

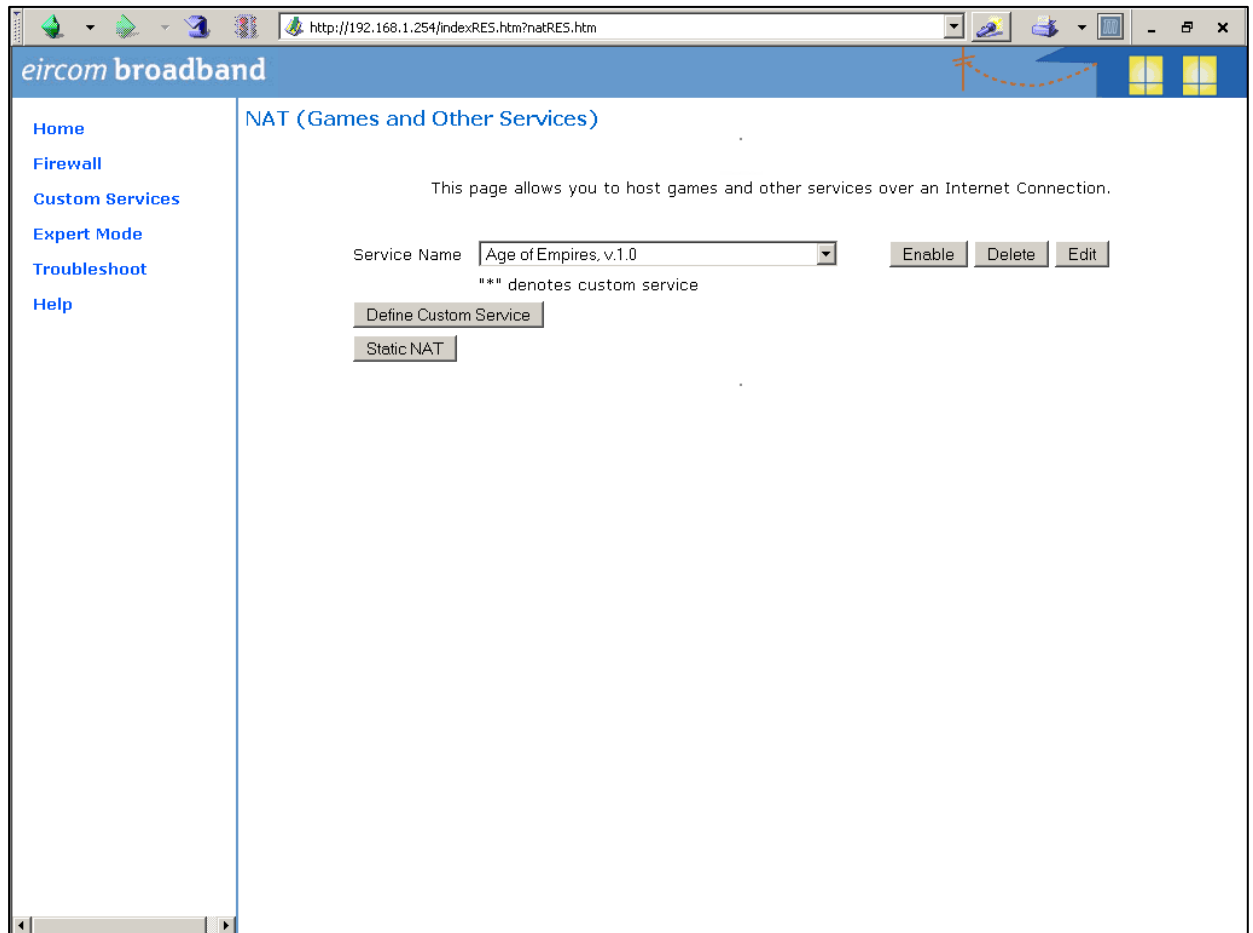


Click on the button 'Define Custom Service' to display the next screen:  
Select the button 'Port Forwarding: Range of Ports' as shown and press 'Next'.

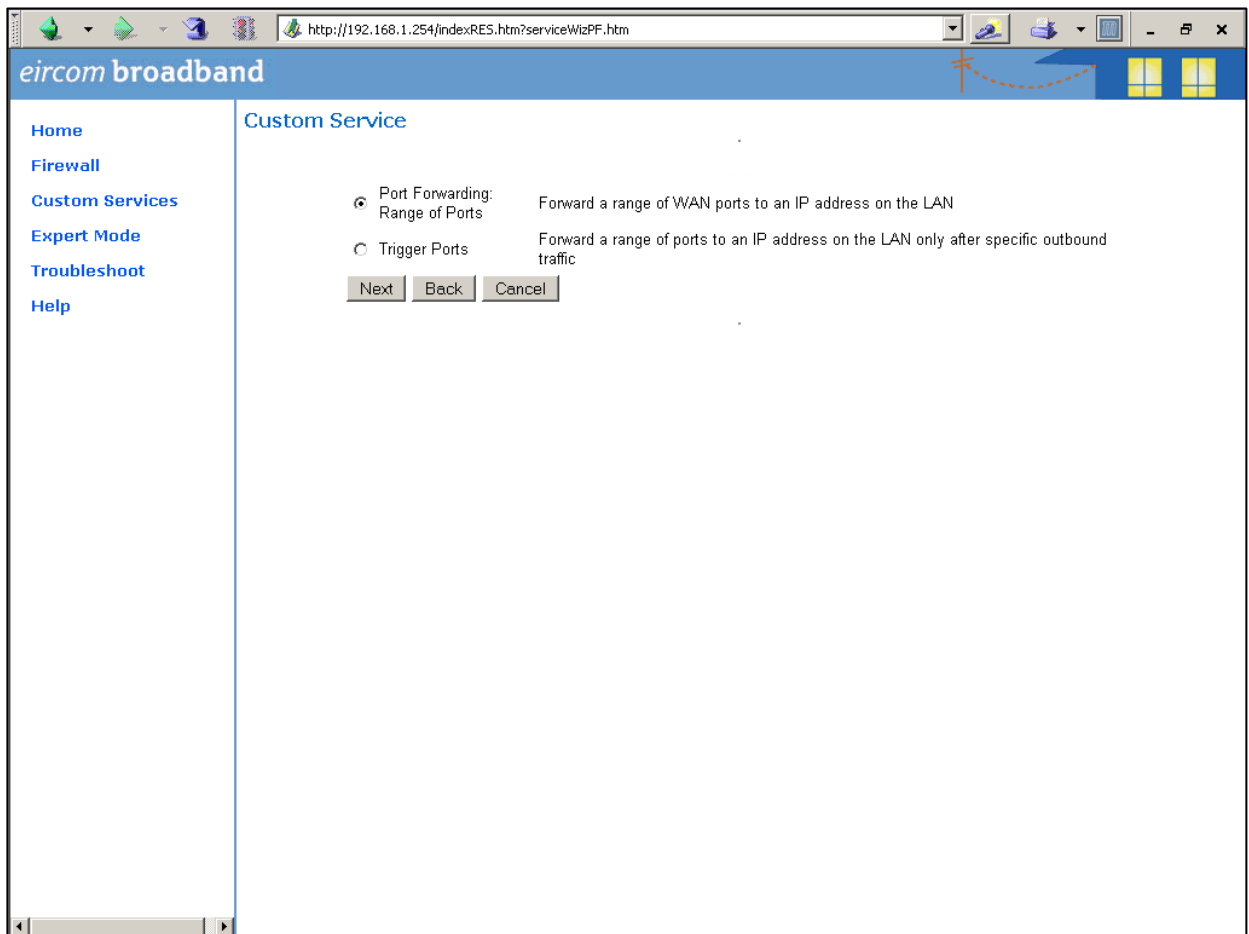


At the next screen type in the following information as shown:

Service Name: Advantage TCP  
Global Port Range: 5075 - 5075  
Base Host Port: 5075  
Protocol: TCP


Press 'Next' and on the following screen press 'Done'.

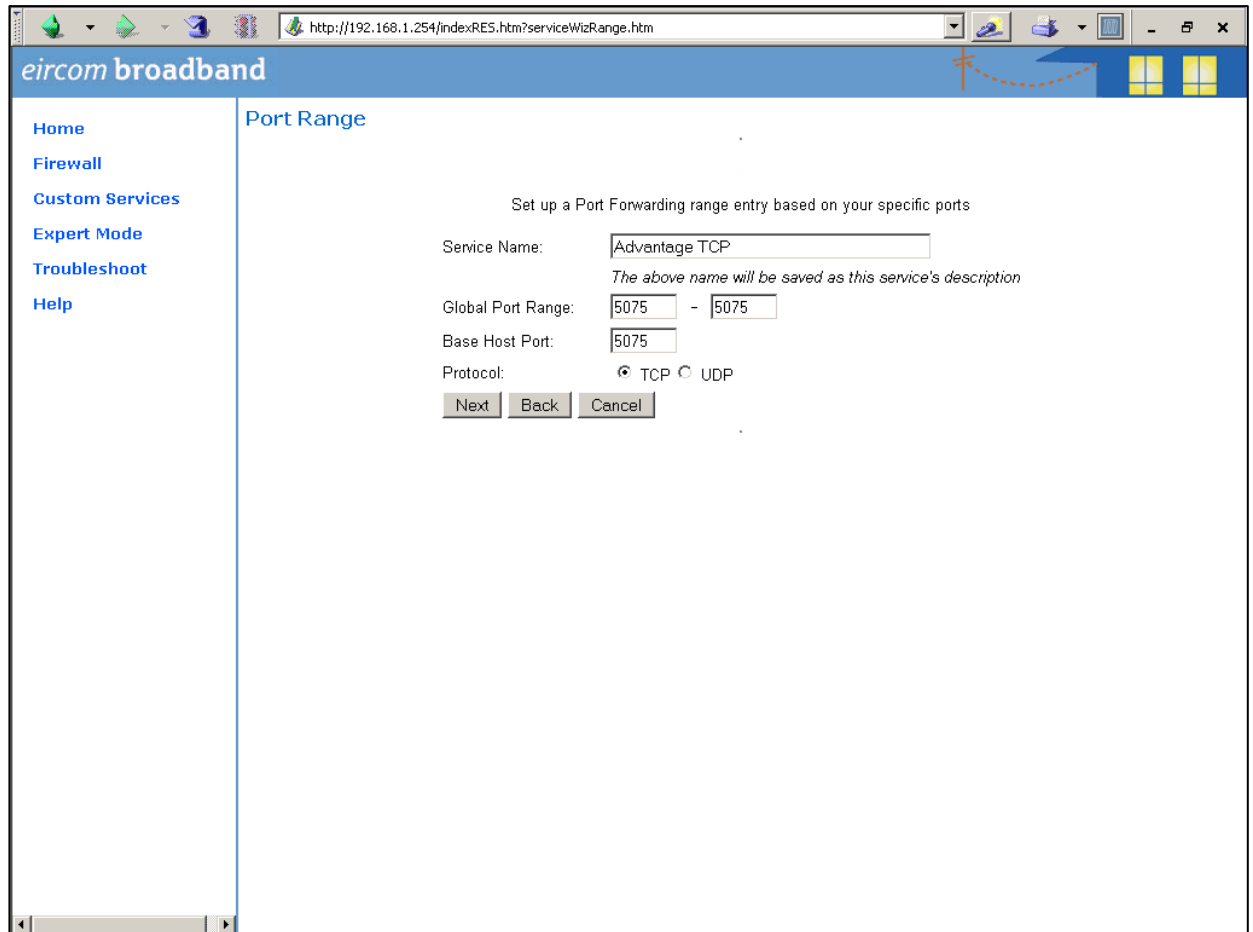

On the next screen, open the dropdown list and select the service 'Advantage TCP' which you have defined and press the button 'Enable'.

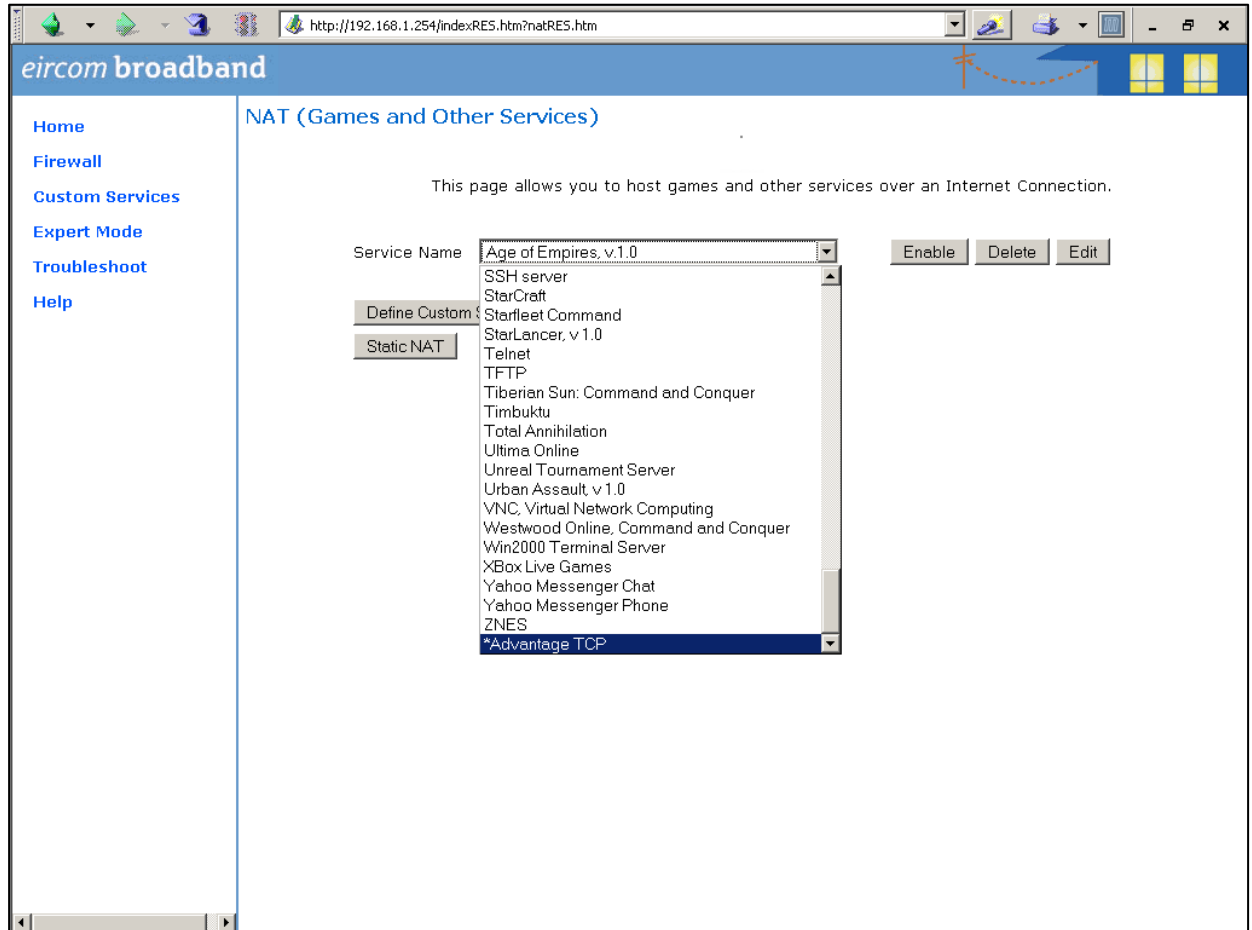


The following screen is displayed:

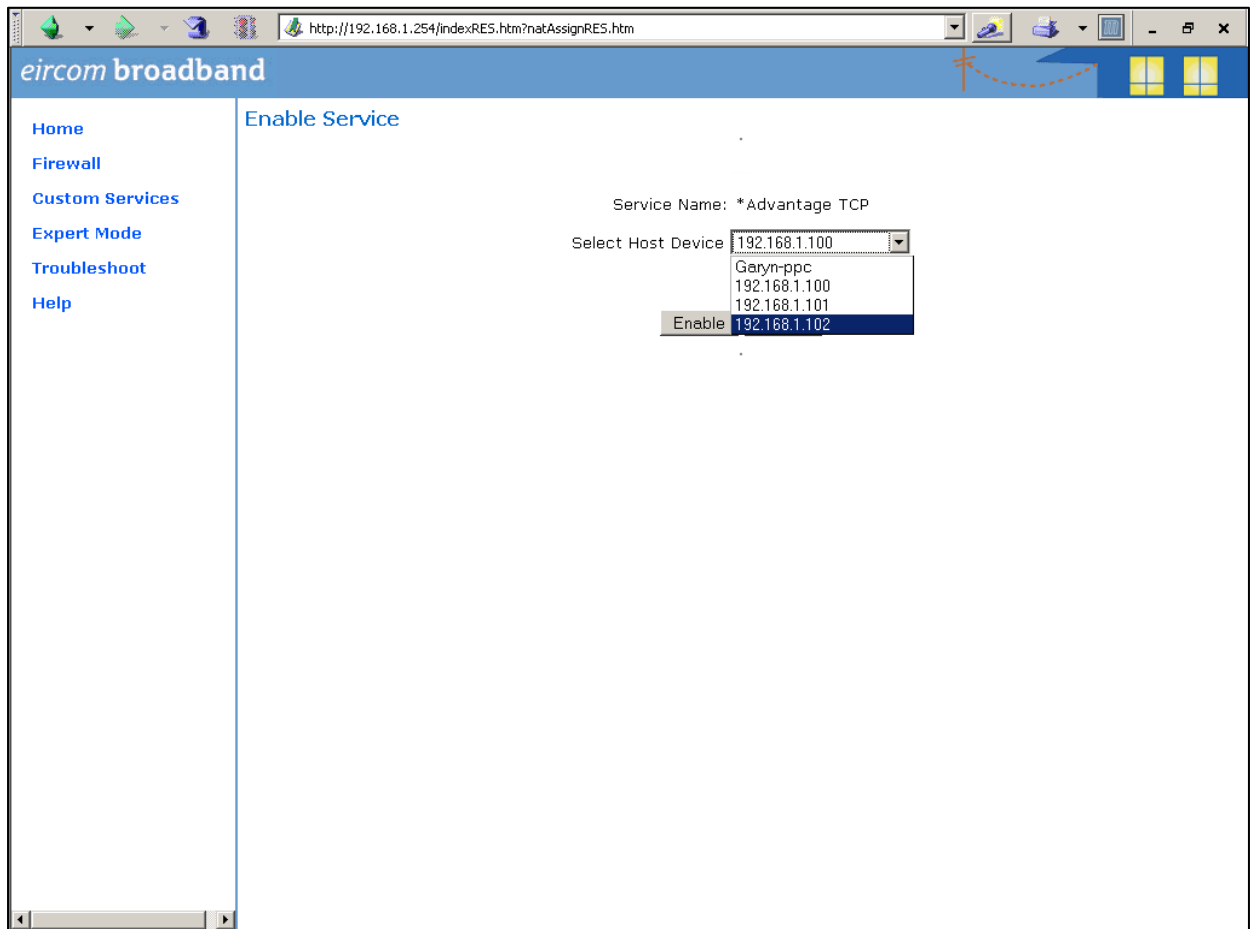


In the dropdown box 'Select Host Service' choose the local LAN IP address of the Opera (here called Advantage) system.  
Press 'Enable'.

All TCP traffic on port 5075 will now be forwarded to the Opera system (called Advantage in this example) and this is recorded as shown on the following screen.

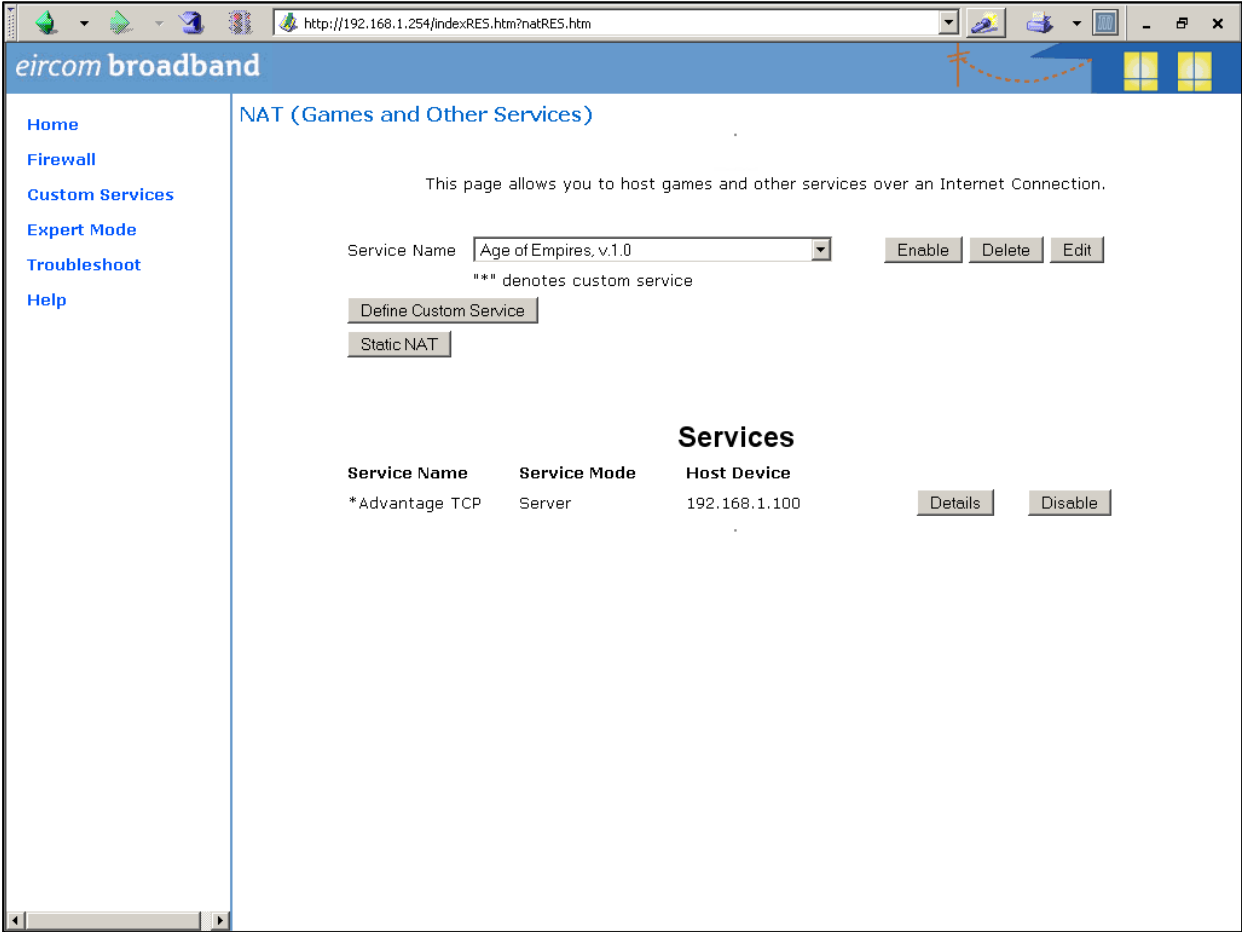


### Step 4 Define port Forwarding for UDP

Press the button 'Define Custom Service' to display the following screen. Select 'Port Forwarding: Range of Ports' and press 'Next'.

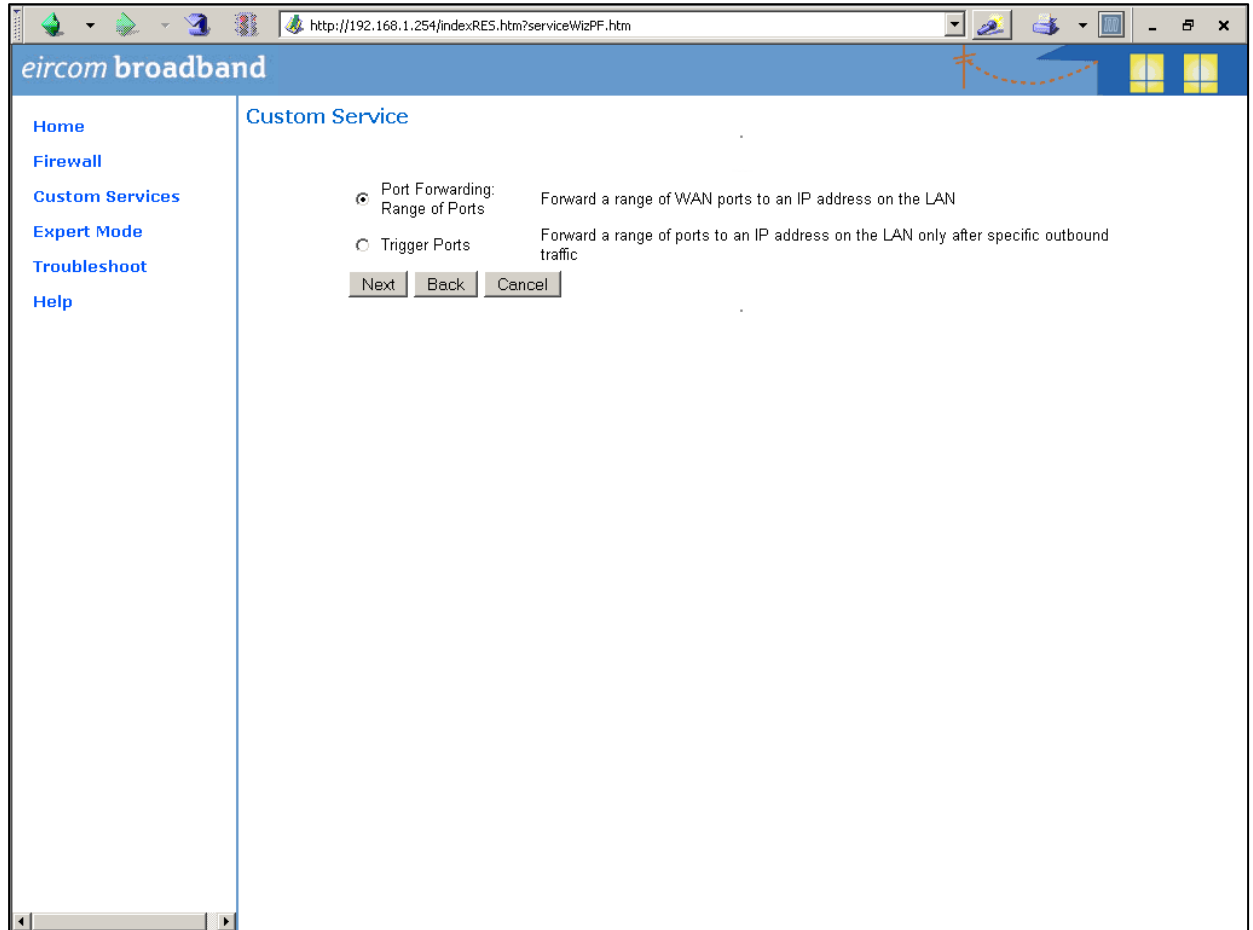

Type in the following information on the next screen as shown:


Service Name: Advantage UDP  
Global Port range: 50000 – 50031  
Base Host Port: 50031  
Protocol: UDP

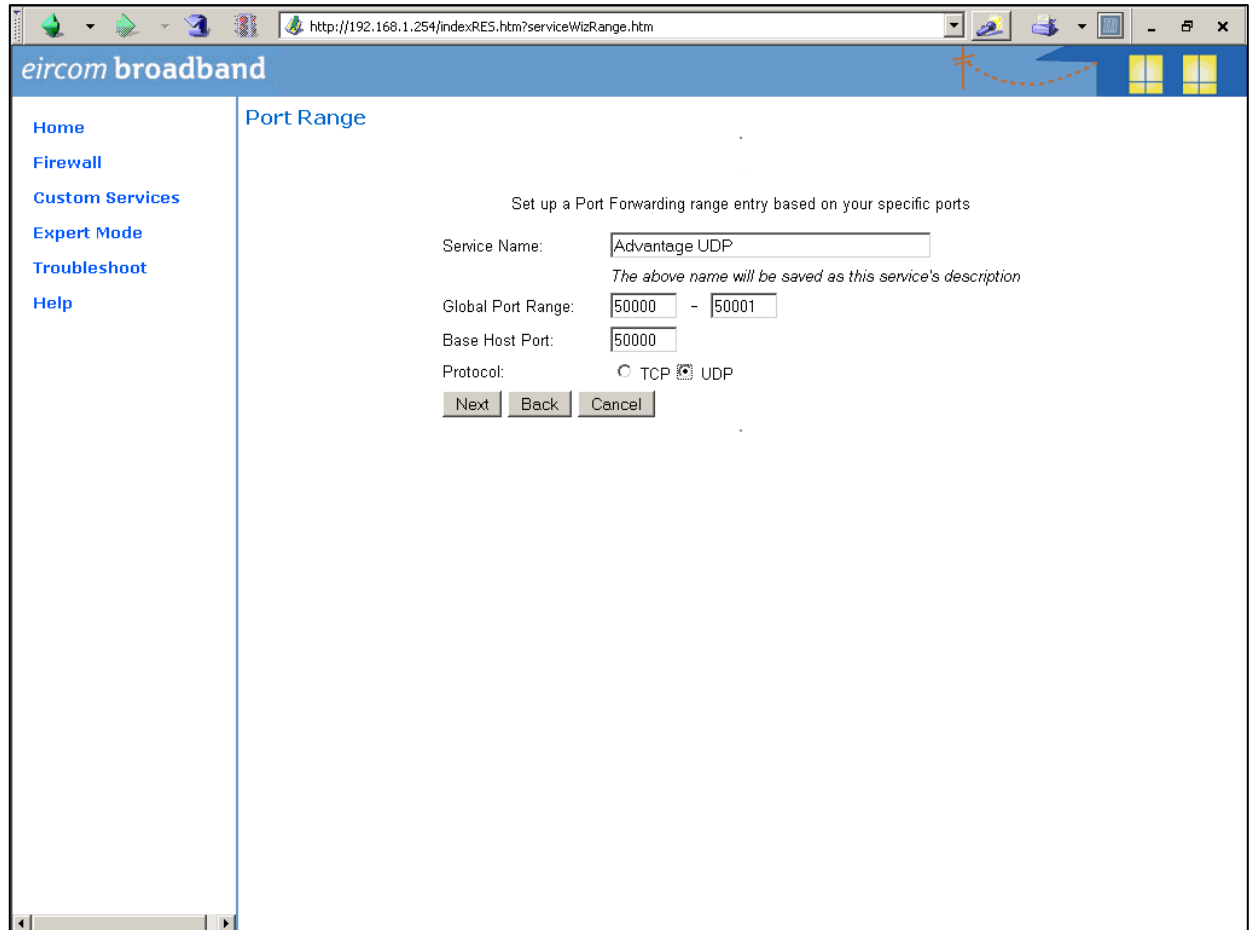


Press 'Next' and on the following screen, press 'Done'. The next screen is displayed.




Select 'Advantage UDP' from the drop down menu and press Enable.

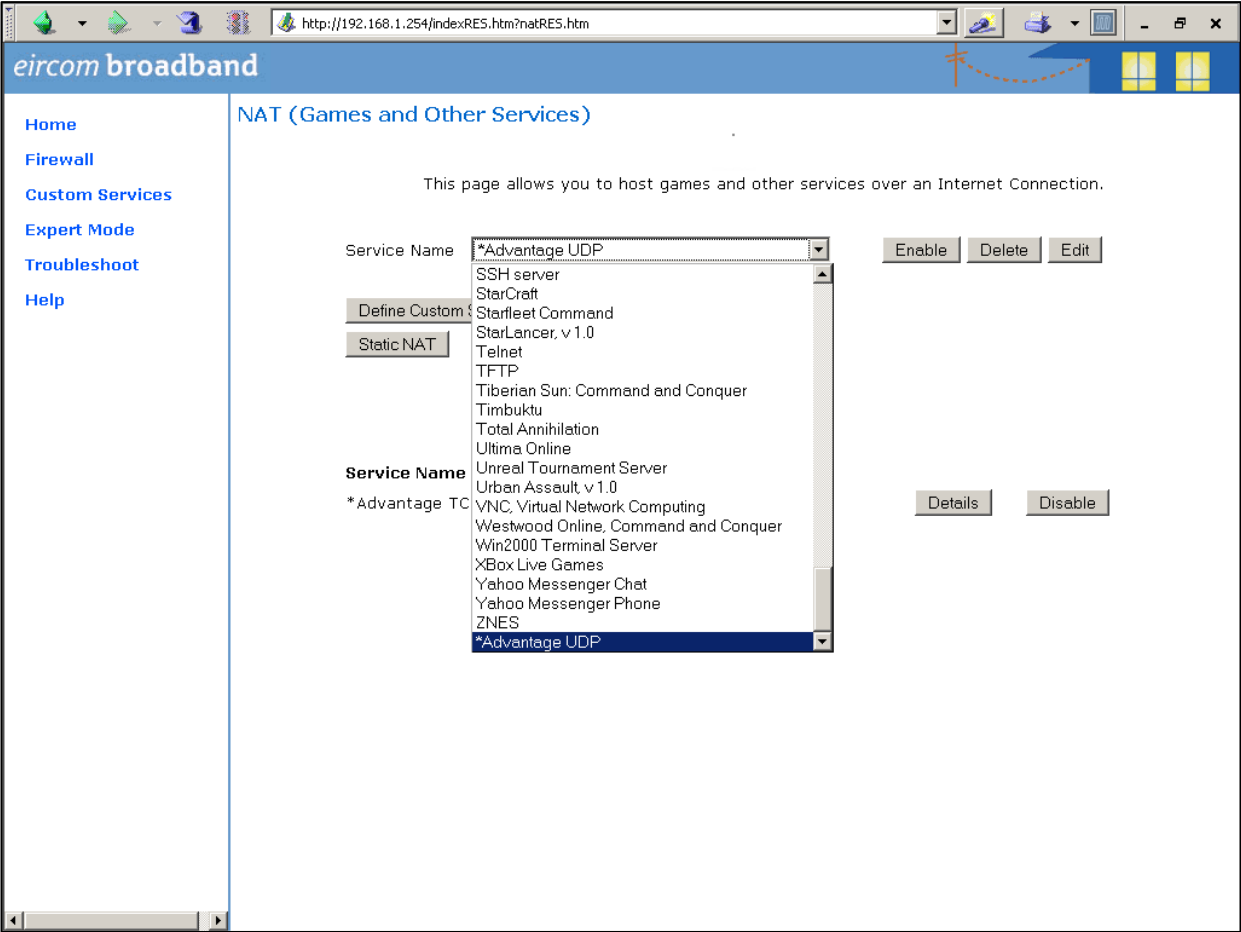

In the following screen select the local LAN IP address of the Opera (Advantage) system in the box 'Select Host Device' and press 'Enable'.

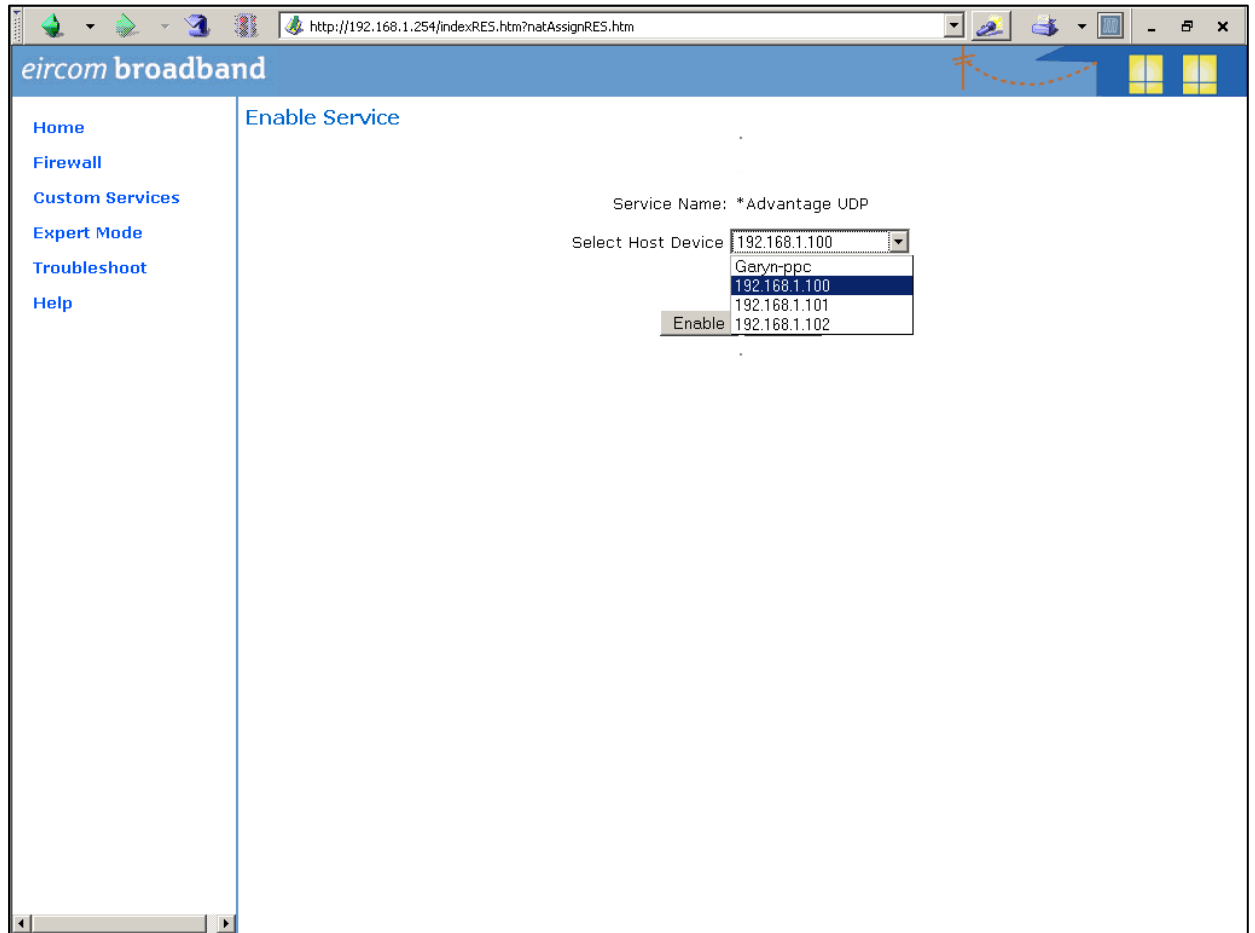

All UDP traffic on ports 50000 to 50031 will now be forwarded to the Opera (Advantage) system and this is recorded as shown on the next screen.

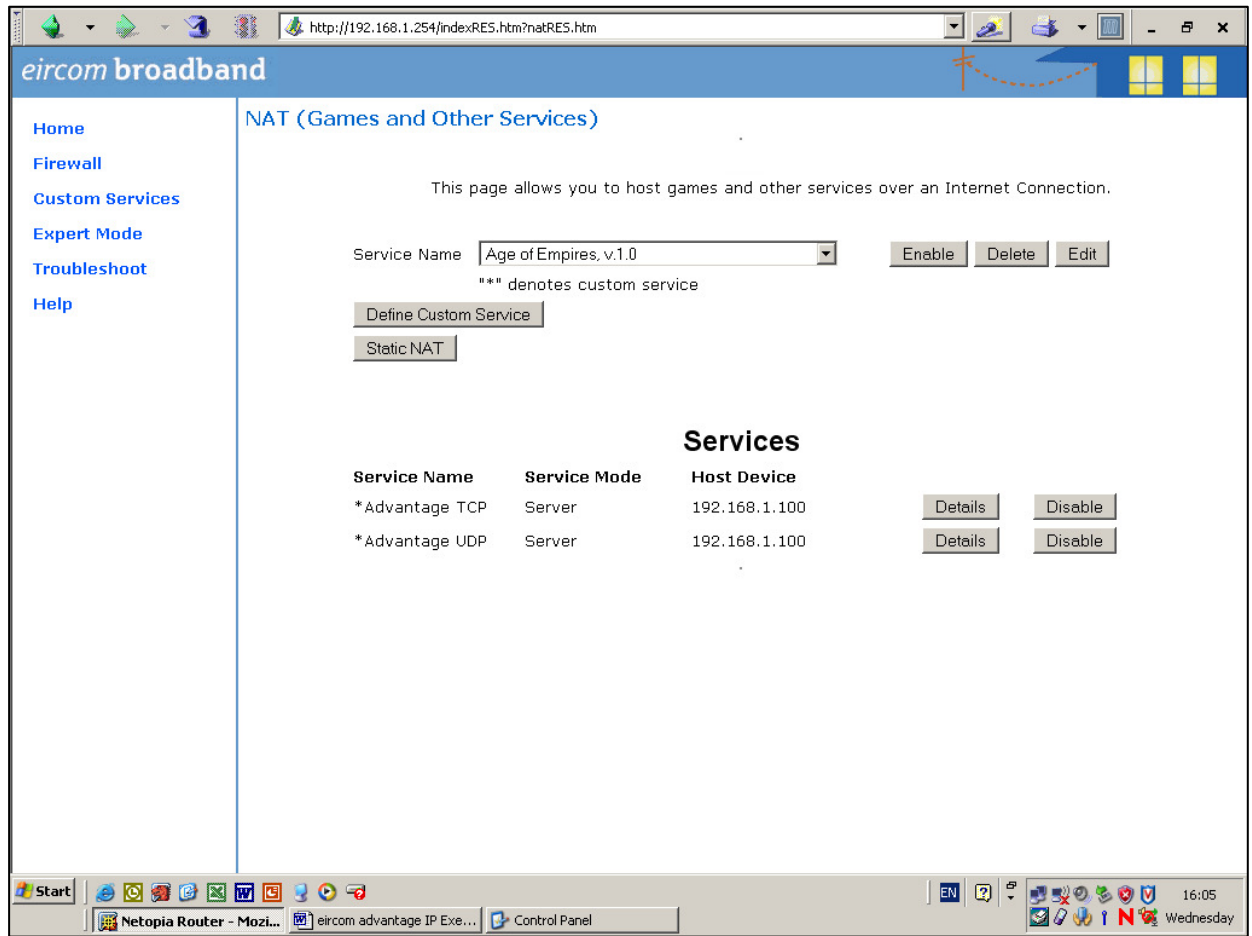

This completes the configuration of the Port Forwarding.



## Appendix XI Usage of the twenty four available communication end points

<b>End points used by devices in communication, 24 max.</b>	IP system phone on the LAN	IP system phone remote, WAN	Symbian SIP extension, WLAN	Analogue a/b extensions	SIP trunk	VoIP Networking channel	ISDN trunk channel	PSTN analogue trunk	Automated Attendant	Voice mail
IP system phone on the LAN	0	2	2	1	2	2	1	1	1	1
IP system phone remote, WAN	2	2	2	1	2	2	1	1	1	1
Symbian SIP extension, WLAN	2	2	2	1	2	2	1	1	1	1
Analogue a/b extensions	1	1	1	0	1	1	0	0	0	0
SIP trunk	2	2	2	1	2	2	1	1	1	1
VoIP Networking channel	2	2	2	1	2	2	1	1	1	1
ISDN trunk channel	1	1	1	0	1	1	0	0	0	0
PSTN analogue trunk	1	1	1	0	1	1	0	0	0	0
Automated Attendant	1	1	1	0	1	1	0	0	n/a	n/a
Voice mail	1	1	1	0	1	1	0	0	n/a	n/a